

Part Description	Drawing No.	MSO 1250 Qty.	MSO 1500 Qty.	MSO 2000 Qty.	MSO 2500 Qty.
		Part No.	Part No.	Part No.	Part No.
Central Shovel	TAV2.3	8 S3A	8 S3A	12 S3A	12 S3A
Lower Lateral Shovel	TAV2.18	4 S18A	4 S18A	4 S18A	4 S18A
Right Lateral Upper Shovel	TAV2.19	2 S19A	2 S19A	2 S19A	2 S19A
Left Lateral Upper Shovel	TAV.22	2 S22A	2 S22A	2 S22A	2 S22A
Wear Plate	TAV1.11	84 S11A	84 S11A	108 S11A	108 S11A
Central Arm	TAV2.2	8 S2A	8 S2A	12 S2A	12 S2A
Right Lateral Arm	TAV2.17	2 S17A	2 S17A	2 S17A	2 S17A
Left Lateral Arm	TAV2.20	2 S20A	2 S20A	2 S20A	2 S20A
Arm Cap	TAV2.8	12 S8A	12 S8A	16 S8A	16 S8A
Cleaning Ring	TAV2.27	S27A	S27A	S27A	S27A
Spacer	TAV2.26	S26A	S26A	S26A	S26B

Part Description	Drawing No.	MSO 3000 Qty.	MSO 3700 Qty.	MSO 4500 Qty.	MSO 6000 Qty.
		Part No.	Part No.	Part No.	Part No.
Central Shovel	TAV2.3	12 S3B	10 S3C	12 S3C	12 S3D
Lower Lateral Shovel	TAV2.18	4 S18A	4 S18B	4 S18B	4 S18B
Right Lateral Upper Shovel	TAV2.19	2 S19B	2 S19C	2 S19C	2 S19D
Left Lateral Upper Shovel	TAV.22	2 S22B	2 S22C	2 S22C	2 S22D
Wear Plate	TAV1.11	72 S11B	126 S11C	154 S11C	98 S11D
Central Arm	TAV2.2	12 S2A	10 S2B	12 S2B	12 S2B
Right Lateral Arm	TAV2.17	2 S17A	2 S17B	2 S17B	2 S17B
Left Lateral Arm	TAV2.20	2 S20A	2 S20B	2 S20B	2 S20B
Arm Cap	TAV2.8	16 S8A	14 S8B	16 S8B	16 S8B
Cleaning Ring	TAV2.27	S27A	S27B	S27B	S27B
Spacer	TAV2.26	S26B	S26C	S26D	S26D