

XTC™

Reversing Conveyor Belt Cleaning System



ARGONICS
ENGINEERED POLYURETHANE


⚠ WARNING

Always obey all applicable safety rules.
Be sure all power to the conveyor has been disconnected and controls are locked out.

Installation Tools Required

- Tape measure
- Cutting Torch or Hole Saw (3½")
- Level
- Scribe or Chalk
- Welder or Drill
- ½" End Wrench
- 1⅛" End Wrench, Socket or Crescent
- Straight Edge

Assembly Breakdown

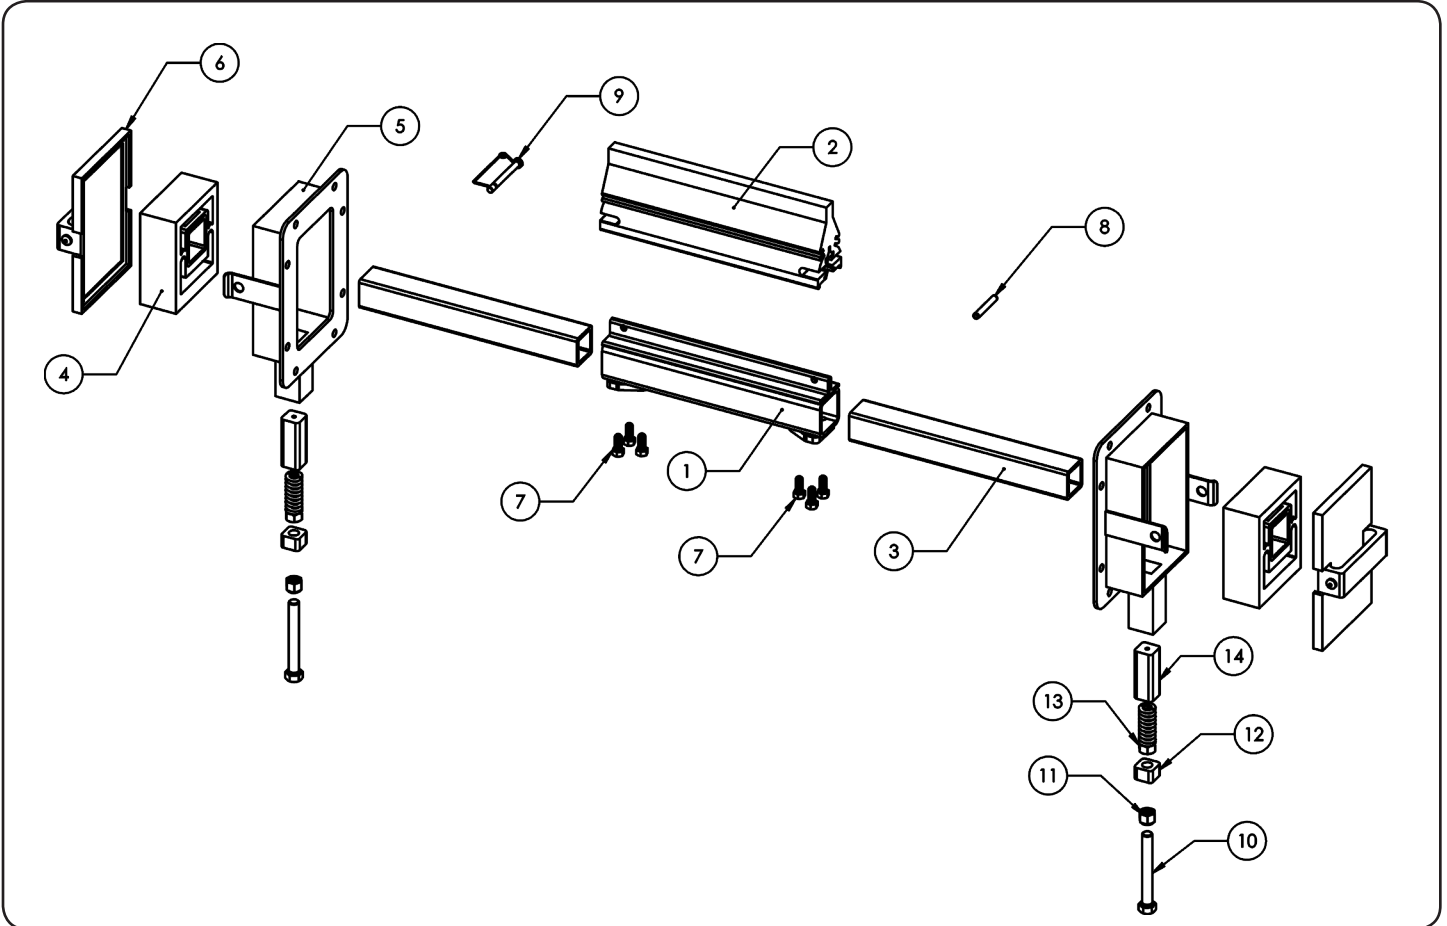

Number	Part Number	Quantity	Description
1	CP-AR-"XX"-A	1	Mainframe
2	CP-XT-"XX"-B93T	1	AccuFlo XTC Blade
3	CP-XT-18B or CP-XT-24B	2	Stub End
4	CP-XT-67C-B93	2	Extended Stub End
5	CP-XT-710A	2	Door Frame
6	CP-XT-710B-G83	2	Door Plate
7	CP-AR-5125 S	6	Stainless Hex Head Set Screw 1/2" x 1-1/4"
8	CP-AR-305	1	Spring Pin
9	CP-AR-4000	1	Tension Pin 1/4" x 4"
10	BOLT-0.75X6.0-NCFT	2	Tap Bolt
11	NUT-008	2	0.75 - 10UNC Brass Nut
12	CP-XT-1515	2	Nylon Tensioner Nut
13	CP-DP-3125	2	Tension Spring
14	CP-XT-153-G83	2	Spring Sleeve

INSTALLATION

Step One: Layout

Place a straight edge or level perpendicular to the belt by using a square (Figure 1) across the width of the belt. Where the belt leaves the head pulley (L1), make a mark on each side of the mounting structure wall (L2). Repeat this process within the 16" maximum mounting area (A) shown in Figure 2 below. This will be your L3 mark. Now measure perpendicular to the belt $14\frac{5}{8}"$ (B) down from your marks and scribe a line between these two points. **This line should be parallel with the belt and $14\frac{5}{8}" \pm \frac{1}{4}"$ down.** The XTC system can be mounted anywhere along this line. Make sure that both sides of the mounting structure wall are marked exactly the same.

The ideal location is to have the edge of the door frame directly below and perpendicular to the pulley shafts center as shown in Figure 2. If no structure is available at this location, one will need to be added.

Step Two: Mounting

The XTC system comes fully assembled. Remove the door frames from the mainframe by removing the door plates and loosening the square head set screws from the web-torque tensioners. The door frames are designed to be welded or bolted into position. Using a door frame as a template, line up the lower right hand corner of the door frame with the bisected lines on the mounting structure wall from Step 1 above.



Trace the inside perimeter and the entire outside perimeter of the door frame onto the mounting structure wall. Also, transfer the bolt hole pattern if you intend to bolt the system into place rather than weld. Repeat this process for the other side of the mounting structure. **NOTE: Both sides must be equal and perpendicular to the belt.**

Cut the center approximately $\frac{1}{2}"$ larger than the trace which was scribed on each side of the mounting structure. **NOTE: For Bolt In Only - Using the traces that you scribed for the mounting holes, drill eight $\frac{5}{8}"$ diameter holes to accept $\frac{1}{2}"$ diameter grade 8 bolts.** Place the door frame onto the side of the mounting structure wall. Use the scribed perimeter lines to line up the frame and then weld or bolt it into place. If welding, eight stitch welds is sufficient on the corners of the door frame. Place the web-torque tensioners back into the door frames so that the head of the "square head" set screw is pointing down. Using a $\frac{1}{2}"$ end wrench, loosen the three square head set screws at each end of the mainframe. Collapse the stub ends into the mainframe. Lift the mainframe into position. Now pull the stub ends out of the mainframe and slide them into the square holes within the web tensioners that are located in the door frames. Make sure that the ends of the stub ends do not protrude through the outside of the web-torque tensioners. Tighten the 1" set screws located on the web-torque tensioners. Center the blade with the belt and snug the six mainframe set screws to secure the stub ends. Check for minimal lateral movement of the assembly. Adjust if necessary, realign and tighten all mainframe set screws.

Step Three: Tensioning

Tighten the $\frac{3}{4}"$ tap bolts located at the bottom of the door frames to bring the blade into contact with the belt on both ends of the system. Once the blade is in contact with the belt, continue to tighten both tap bolts another 10 complete revolutions. Tighten the brass lock nuts to secure web-torque tensioners in this position.

Install door plates by snapping them onto the door frames.

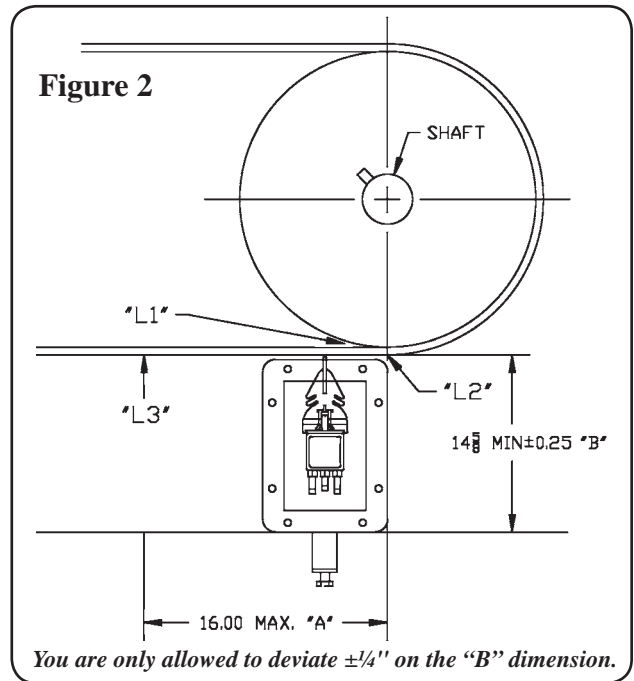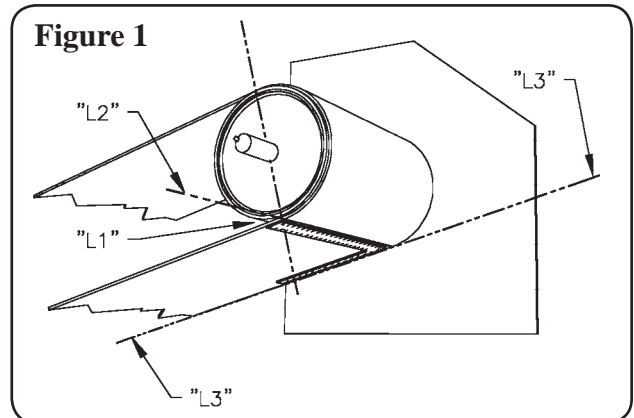

You are only allowed to deviate $\pm\frac{1}{4}"$ on the "B" dimension.

Installation is now complete.

Maintenance or retensioning should not be required throughout the life of the blade.

Jamieson Equipment Company
www.jamiesonequipment.com
toll free 800.875.0280



Other Quality Products From Argonics


**Largest Selection of
Conveyor Belt Cleaner
Replacement Blades**

RAPTOR
Replacement Blades

ACCUFLO
Replacement Blades

*The World's Best Conveyor
Belt Cleaning Systems*

Eraser[™]
Conveyor Cleaners

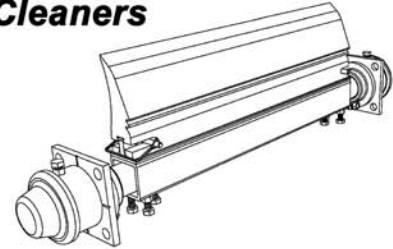

**The Most Complete Line
of Conveyor Support Systems**

LOAD ZONE[™]
Conveyor Support Systems

Impact - Slide - Roll & Slide

Also Available From:



**Classifier Shoes
Screen Deck Accessories
Belt Skirting
Snap-Loc Dust Seal
Modular Wear Liners
Wear Resistant Sheets
Concrete Mixer Lining Systems**

WARNING



Conveyor belt manufacturer do not recommend metal-edged blades for cleaning any conveyor belt surfaces. Argonics concurs with this statement, however, due to demand and as a service to our customers, we do provide metal-edged blades. Argonics offers no warranty or guarantee, nor accepts any liability with the use of a metal-tipped blade on your belt.

Use at your own risk as severe belt damage can occur