

# 590 AG

*Animal Weigher Indicator*

*Version 1.06*

## Operators Manual



**RICE LAKE**<sup>®</sup>  
WEIGHING SYSTEMS  
To be the best by every measure<sup>®</sup>





# Contents

---

- About This Manual ..... 1**
- Safety ..... 1**
- 1.0 Introduction..... 2**
  - 1.1 Operating Modes ..... 2
  - 1.2 Front Panel Keypad ..... 3
  - 1.3 Display Annunciators ..... 4
  - 1.4 Indicator Operations ..... 5
    - 1.4.1 Enter % shrink ..... 5
    - 1.4.2 Toggle Units ..... 5
    - 1.4.3 Zero Scale ..... 5
    - 1.4.4 Load Total ..... 5
    - 1.4.5 Print Ticket ..... 5
    - 1.4.6 Enter Head Count ..... 5
- 2.0 Installation ..... 6**
  - 2.1 Unpacking and Assembly ..... 6
  - 2.2 Enclosure Disassembly ..... 6
  - 2.3 Cable Connections ..... 6
    - 2.3.1 Cable Grounding ..... 7
    - 2.3.2 Load Cells ..... 8
    - 2.3.3 Serial Communications ..... 8
  - 2.4 Enclosure Reassembly ..... 9
  - 2.5 Battery Installation ..... 10
  - 2.6 AC Adapter ..... 11
  - 2.7 Board Removal ..... 11
  - 2.8 Replacement Parts ..... 12
- 3.0 Configuration ..... 14**
  - 3.1 Configuration Methods ..... 14
    - 3.1.1 Revolution Configuration ..... 14
    - 3.1.2 EDP Command Configuration ..... 15
    - 3.1.3 Front Panel Configuration ..... 16
  - 3.2 Menu Structures and Parameter Descriptions ..... 18
    - 3.2.1 Configuration Menu ..... 18
    - 3.2.2 Format Menu ..... 20
    - 3.2.3 Calibration Menu ..... 22
    - 3.2.4 Serial Menu ..... 23
    - 3.2.5 Program Menu ..... 24
    - 3.2.6 Print Format Menu ..... 26
    - 3.2.7 Version Menu ..... 26
- 4.0 Calibration ..... 27**
  - 4.1 Front Panel Calibration ..... 27
  - 4.2 EDP Command Calibration ..... 27
  - 4.3 Revolution Calibration ..... 28



<b>5.0</b>	<b>EDP Commands</b> .....	<b>29</b>
5.1	The EDP Command Set . . . . .	29
5.1.1	Key Press Commands . . . . .	29
5.1.2	Reporting Commands . . . . .	30
5.1.3	The RESETCONFIGURATION Command . . . . .	30
5.1.4	Parameter Setting Commands . . . . .	30
5.1.5	Normal Mode Commands . . . . .	32
5.2	Saving and Transferring Data . . . . .	32
5.2.1	Saving Indicator Data to a Personal Computer . . . . .	32
5.2.2	Downloading Configuration Data from PC to Indicator . . . . .	32
<b>6.0</b>	<b>Animal Weighing Operation</b> .....	<b>33</b>
6.1	Weighing Animals . . . . .	33
6.1.1	Display Hold Settings . . . . .	33
6.1.2	Shrink Factor Setting . . . . .	33
6.1.3	Head Count Setting . . . . .	33
6.1.4	Weighing Groups . . . . .	33
<b>7.0</b>	<b>Print Formatting</b> .....	<b>35</b>
7.1	Print Formatting Commands . . . . .	35
7.2	Customizing Print Formats . . . . .	36
7.2.1	Using the EDP Port . . . . .	36
7.2.2	Using the Front Panel . . . . .	37
7.2.3	Using Revolution . . . . .	38
<b>8.0</b>	<b>Appendix</b> .....	<b>39</b>
8.1	Error Messages . . . . .	39
8.2	Continuous Output (Stream) Format . . . . .	39
8.3	ASCII Character Chart . . . . .	40
8.4	Front Panel Display Characters . . . . .	42
8.5	Conversion Factors for Secondary Units . . . . .	43
8.6	Digital Filtering . . . . .	44
8.6.1	DIGFLx Parameters . . . . .	45
8.6.2	DFSENS and DFTHRH Parameters . . . . .	45
8.6.3	Setting the Digital Filter Parameters . . . . .	45
8.7	Test Mode . . . . .	46
8.8	Specifications . . . . .	48
	<b>590 AG Indicator Limited Warranty</b> .....	<b>49</b>
	<b>For More Information</b> .....	<b>50</b>



# About This Manual

---

This manual is intended for use by service technicians responsible for installing and servicing the *590 AG Indicator*.

Configuration and calibration of the indicator can be accomplished using the indicator front panel keys, the EDP command set, or Version 3.0 or later of the *Revolution*<sup>®</sup> configuration utility. See Section 3.1 for information about configuration methods.



Authorized distributors and their employees can view or download this manual from the Rice Lake Weighing Systems distributor site at [www.ricelake.com/manuals](http://www.ricelake.com/manuals).

The *Operator Card* included with this manual provides basic operating instructions for users of the *590 AG Indicator*. Please leave the *Operator Card* with the indicator when installation and configuration are complete.

## Safety

---

### Safety Signals

#### Safety Symbol Definitions:



Indicates a potentially hazardous situation that, if not avoided could result in serious injury or death, and includes hazards that are exposed when guards are removed.



Indicates information about procedures that, if not observed, could result in damage to equipment or corruption to and loss of data.

### Safety Precautions



Do not operate or work on this equipment unless you have read and understand the instructions and warnings in this manual. Failure to follow the instructions or heed the warnings could result in injury or death. Contact any Rice Lake Weighing Systems dealer for replacement manuals. Proper care is your responsibility.



Some procedures described in this manual require work inside the indicator enclosure. These procedures are to be performed by qualified service personnel only.

## General Safety

---



*Failure to heed may result in serious injury or death.*

**DO NOT** allow minors (children) or inexperienced persons to operate this unit.

**DO NOT** operate without all shields and guards in place.

**DO NOT** step on the unit.

**DO NOT** jump on the scale.

**DO NOT** use for purposes other than weight taking.

**DO NOT** place fingers into slots or possible pinch points.

**DO NOT** use any load bearing component that is worn beyond 5% of the original dimension.

**DO NOT** use this product if any of the components are cracked.

**DO NOT** exceed the rated load limit of the unit.

**DO NOT** make alterations or modifications to the unit.

**DO NOT** remove or obscure warning labels.

*Before opening the unit, ensure the power cord is disconnected from the outlet.*

*Keep hands, feet and loose clothing away from moving parts.*

# 1.0 Introduction

---

The *590 AG Indicator* is a single-channel digital weight indicator housed in a NEMA 4X/IP66-rated stainless steel enclosure. The indicator front panel consists of a one inch (25 mm), six-digit, liquid crystal (LCD) display and 19 button keypad. Features include:

- Drives up to four 350Ω or eight 700Ω load cells
- Supports four and six wire load cell connections
- Electronic data processing (EDP) port for full duplex, RS-232 communications at up to 19200 bps
- Powered by six C batteries for complete portability
- AC adapter for 115 or 230 VAC power
- Configurable standby mode limits indicator power consumption when scale is inactive

The *590 AG Indicator* is NTEP-certified for Classes III and III L at 10,000 divisions. See Section 8.8 for detailed specifications.

## 1.1 Operating Modes

The *590 AG Indicator* has several modes of operation:

### Normal (Weighing) Mode

Normal mode is the “production” mode of the indicator. The indicator displays gross weight, using the LCD annunciators described in Section 1.3 to indicate scale status and the type of weight value displayed. Once configuration is complete and a legal seal is affixed to the back of the indicator, the *590 AG Indicator* can operate only in normal mode.

### Setup Mode

Most of the procedures described in this manual require the indicator to be in setup mode, including configuration and calibration.

To enter setup mode, remove the large fillister head screw from the enclosure backplate. Insert a screwdriver or a similar tool into the access hole and press the setup switch once. The indicator display changes to show the word *CONFIG*.

### Test mode

Test mode provides a number of diagnostic functions for the indicator. Like setup mode, test mode is entered using the setup switch. See Section 8.7 for more information about entering and using test mode.

### Standby mode

Standby mode is a configurable low-power mode used to extend battery life when the indicator is inactive. In standby mode, the LCD display shows the word *STNDBY*; press any key to exit standby mode. See Section 3.2.5 for information about configuring standby mode.

## 1.2 Front Panel Keypad

Figure 1-1 shows the 590 AG Indicator front panel keys and the key functions assigned in normal mode.

The symbols shown at the right side on the keys in Figure 1-1 (representing up, down, enter, left, right) describe the key functions assigned in setup mode. In setup mode, the keys are used to navigate through menus, select digits within numeric values, and increment/decrement values. See Section 3.1.3 for information about using the front panel keys in setup mode.

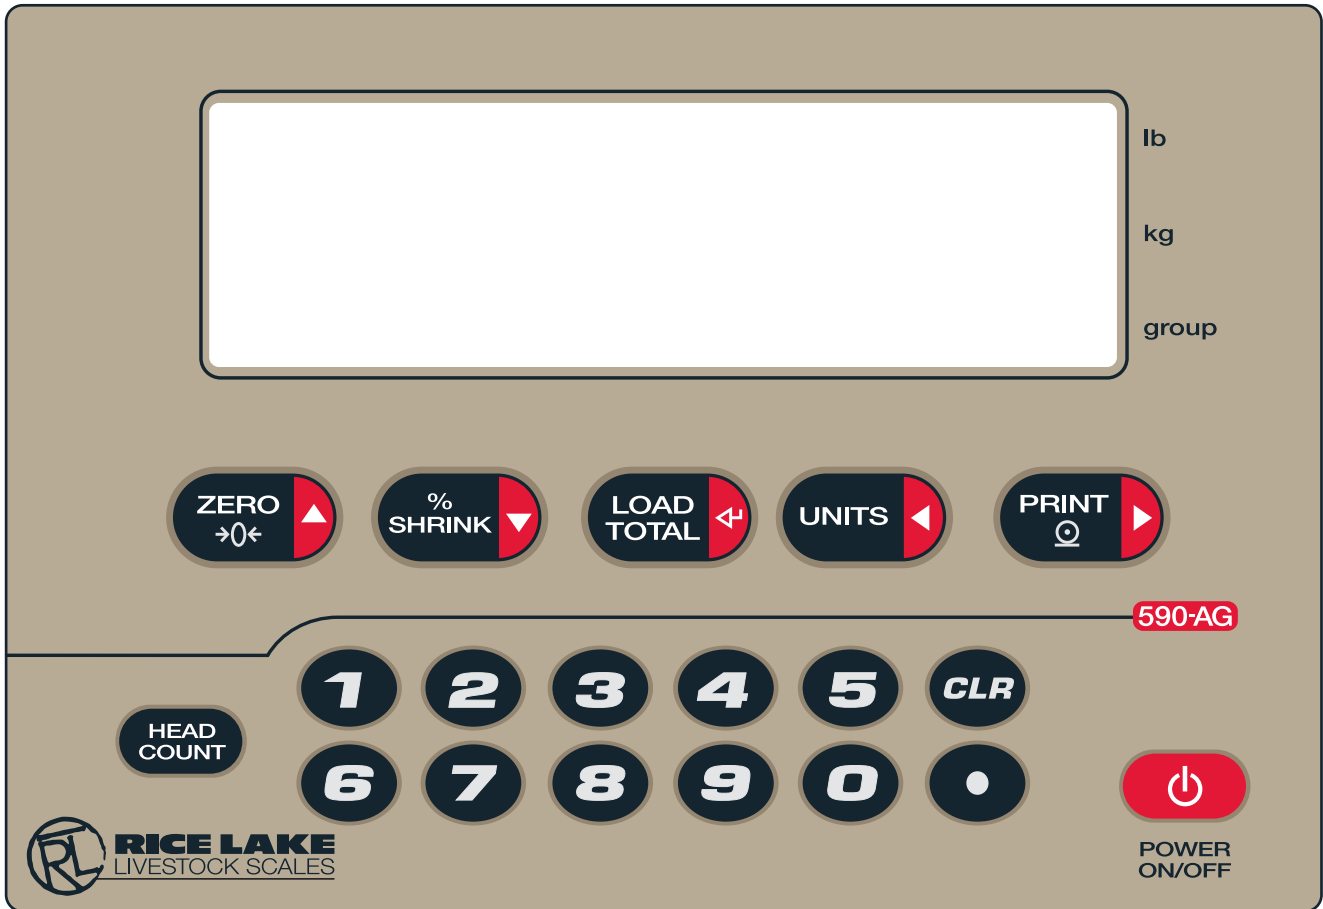


Figure 1-1. Front Panel Keypad

### 1.3 Display Annunciators

The 590 AG Indicator display uses a set of LCD annunciators to provide additional information about the value being displayed. Figure shows these annunciators and their meanings.

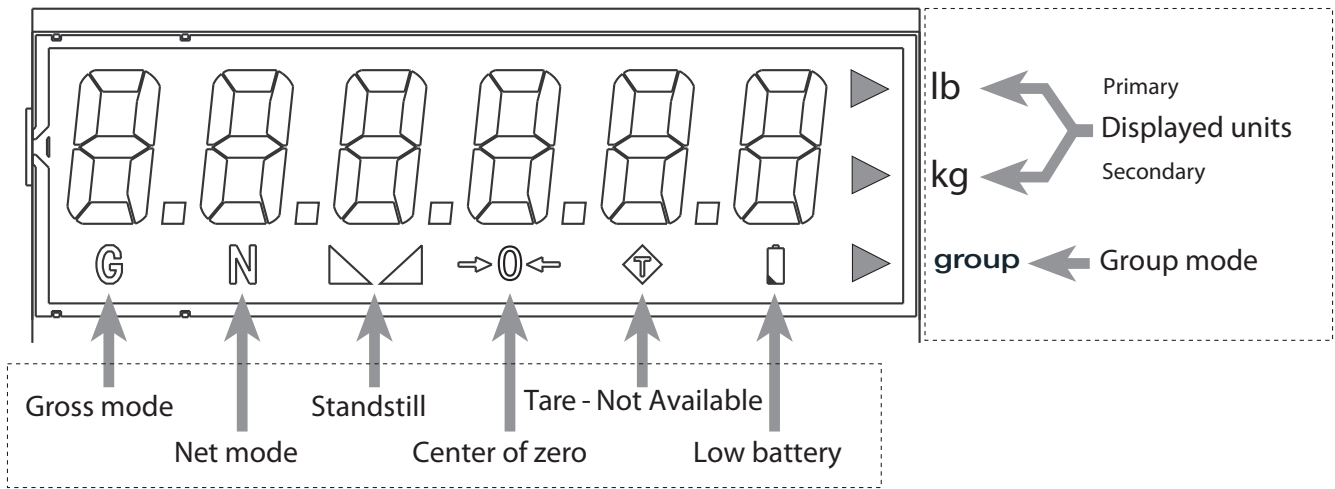


Figure 1-2. Display Annunciators

Symbol	Description
G	The displayed weight is a gross weight.
N	The displayed weight is a net weight.
	Scale is at standstill or within the specified motion band. Some operations, including zero, tare, and printing functions, can only be done when the standstill symbol is shown.
	Center of zero. Gross weight is within 0.25 graduations of zero. This annunciator lights when the scale is zeroed.
	Tare features are not available on the 590 AG.
	Indicates that the battery charge is low.
lb, kg, group	Three arrow annunciators on the right side of the LCD display indicate the units associated with the displayed value. The bottom arrow annunciator (group) is lit when the indicator is in group mode. The top and middle arrows, labeled lb and kg, show primary and secondary units, as described below: <ul style="list-style-type: none"> <li>• If the displayed weight is in pounds, the top arrow (lb) is lit; if kilograms, the middle arrow (kg) is lit.</li> <li>• If the primary unit of weight is pounds, the middle (kg) arrow is lit for secondary units—or, if the primary unit is kilograms, the top (lb) arrow is lit for secondary units, unless the secondary unit of weight is the same as the primary unit.</li> <li>• If neither primary nor secondary units are pounds or kilograms, the top arrow is used as a primary units annunciator and the middle arrow is used as the secondary units annunciator. A set of replacement overlay decals is included in the parts kit for units other than pounds and kilograms.</li> <li>• If the indicator <b>Display Hold Mode</b> is enabled, the current unit annunciator will blink when holding the display.</li> </ul>

Table 1-1. Description of Display Annunciators



**Note** See Section 3.2.2 for information about configuring primary and secondary display units.



## 1.4 Indicator Operations

Basic operations are summarized below:

### 1.4.1 Enter % shrink

Use the numeric keypad to enter the shrink factor value, then press the % **SHRINK** key. The entered shrink factor is applied to every weighment until the shrink factor is changed or the indicator is reset. This value is stored in the eeprom to survive power cycles. The shrink factor limits are 0.00 to 99.00 percent. Default is 0.00 percent.

### 1.4.2 Toggle Units

Press the **UNITS** key to switch between primary and secondary units. The units annunciator arrow on the right side of the LCD display points to the units identifier.



**Note** *Units cannot be changed once a group has been started.*

### 1.4.3 Zero Scale

1. In gross mode, remove all weight from the scale and wait for to display.
2. Press the **ZERO** key. 0 lights to indicate the scale is zeroed.

### 1.4.4 Load Total

1. Wait for .
2. Press the **LOAD TOTAL** key when done with all load groups.

This will send load total data to the serial port. It will also clear the internal load total accumulators and the display hold state. The Group Mode (group) annunciator will turn off.

### 1.4.5 Print Ticket

1. Wait for .
2. Press the **PRINT** key to send data to the serial port.

The **PRINT** key has two different outputs based on the Group Mode (group) state.

- If indicator is not in group mode, PRINT will output the Gross weight displayed.
- If indicator is in group mode, PRINT will output (reprint) the group data of the last group weighed.



**Note** *The reprint of a ticket does not require the scale to be at a standstill.*

### 1.4.6 Enter Head Count

1. Wait for .
2. Use the numeric keypad to enter the number of animals on the scale, then press the **HEAD COUNT** key. The head count limits are 1 to 99. If the value entered contains a decimal point, only the numbers to the left of the decimal point are used.
3. If display hold mode is disabled, the group data will be immediately be sent to the serial port.
4. If display hold mode is enabled, the indicator will display **-SPL-** as the scale is sampled for the sampling time duration. When the sample time is complete, the indicator will display the average weight of the samples collected and will blink the current weight units annunciator indicating the display is being held. The group data will then be sent to the serial port.



**Note** *When display hold mode is disabled, the scale needs to be at standstill to enter the head count.  
When display hold mode is enabled, it does not need to be at stand still.*

## 2.0 Installation

This section describes procedures for connecting load cell and serial communications cables to the indicator. Instructions for battery and CPU board replacement are included, along with assembly drawings and parts lists for the service technician.



Use a wrist strap to ground yourself and protect components from electrostatic discharge (ESD) when working inside the indicator enclosure.

### 2.1 Unpacking and Assembly

Immediately after unpacking, visually inspect the indicator to ensure all components are included and undamaged. The shipping carton should contain the indicator with attached tilt stand, this manual and a parts kit. If any parts were damaged in shipment, immediately notify Rice Lake Weighing Systems and the shipper.

The parts kit contains the items listed below:

- Capacity, annunciator, and identification labels. The annunciator label (PN 53374) provides replacement overlay decals for the displayed units annunciators.
- 3-position (PN 15888) and 7-position (PN 23165) pluggable terminal blocks for load cell and serial communications connectors.
- One 8-32 NC x 7/16 fillister head screw (PN 30623). This screw occupies the hole below the setup switch access screw on the indicator backplate (see Figure 2-5).
- Two 8-32 NC x 3/8 machine screws (PN 14862) for the indicator backplate (see #10 in Figure 2-3).
- Five neoprene washers (PN 45042) for backplate screws included in the parts kit.
- Four rubber bumpers (“feet”) for the tilt stand, PN 42149.
- Two each of grounding clamps (PN 53075), external tooth lock washers (PN 15133), and kep nuts (PN 14676) for cable shield grounding against the backplate.

### 2.2 Enclosure Disassembly

The indicator enclosure must be opened to connect load cell and communications cables.

Power off the indicator and disconnect the AC adapter, if necessary. Place the indicator face-down on an antistatic work mat. Remove the screws that hold the backplate to the enclosure body, then lift the backplate away from the enclosure. Disconnect battery cable to connector J3, then set the backplate assembly aside.

### 2.3 Cable Connections

The 590 AG Indicator provides two cord grips for cabling into the indicator:

- One for the load cell cable
- One for serial communications.

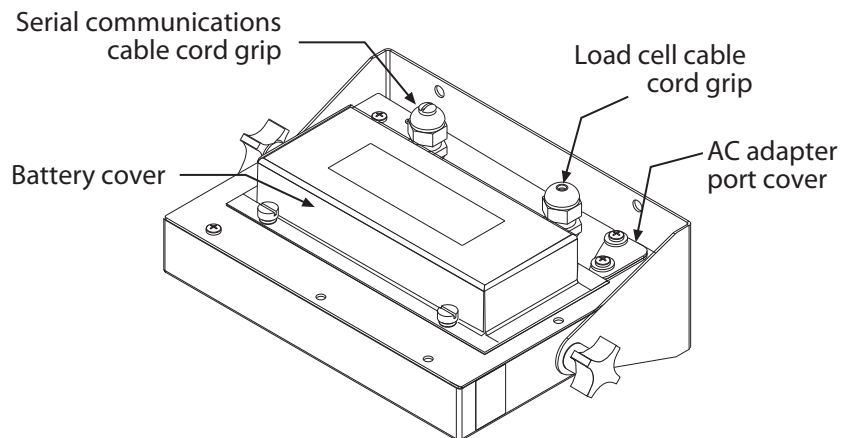


Figure 2-1. 590 AG Indicator Backplate, Showing Key Component Locations

## 2.3.1 Cable Grounding

Except for the power cord, all cables routed through the cord grips should be grounded against the indicator backplate. Do the following to ground shielded cables:

- Use the lockwashers, clamps, and keps nuts provided in the parts kit to install grounding clamps on the backplate studs adjacent to cord grips. Install grounding clamps only for cord grips that will be used; do not tighten nuts.
- Route cables through cord grips and grounding clamps to determine cable lengths required to reach cable connectors. Mark cables to remove insulation and shield as described below:
  - For cables with foil shielding, strip insulation and foil from the cable one half inch (15 mm) past the grounding clamp (see Figure 2-2). Fold the foil shield back on the cable where the cable passes through the clamp. Ensure silver (conductive) side of foil is turned outward for contact with the grounding clamp.
  - For cables with braided shielding, strip cable insulation and braided shield from a point just past the grounding clamp. Strip another half inch (15 mm) of insulation *only* to expose the braid where the cable passes through the clamp (see Figure 2-2).
- For load cell cables, cut the shield wire just past the grounding clamp. Shield wire function is provided by contact between the cable shield and the grounding clamp.
- Route stripped cables through cord grips and clamps. Ensure shields contact grounding clamps as shown in Figure 2-2. Tighten grounding clamp nuts.
- Finish installation using cable mounts and ties to secure cables inside of indicator enclosure.

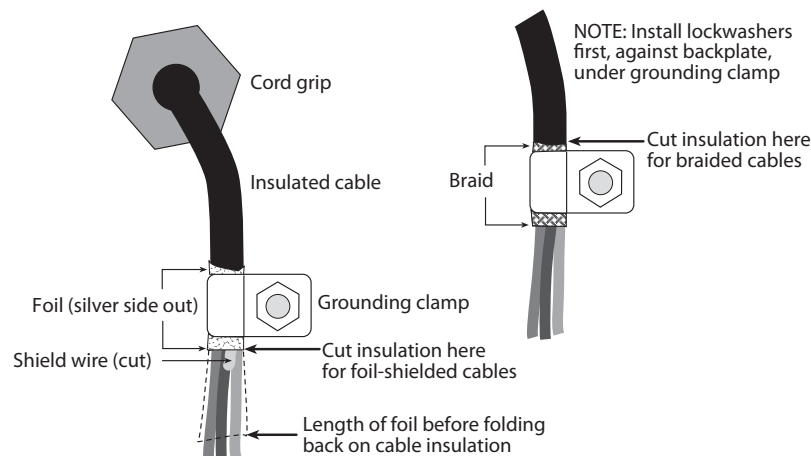


Figure 2-2. Grounding Clamp Attachment for Foil-Shielded and Braided Cabling



**Note** A grounding screw is provided on the indicator backplate for connecting a grounding wire (see Section 2.4).

### 2.3.2 Load Cells

To attach cable from a load cell or junction box, remove connector J1 from the board. The connector plugs into a header on the board. Connect cable from the load cell or junction box through the load cell cable cord grip to connector J1 as shown in Table 2-1. If using 6-wire load cell cable (with sense wires), remove jumpers JP1 and JP2 before reinstalling connector J1 (see Figure ). For 4-wire installation, leave jumpers JP1 and JP2 on.

When connections are complete, reinstall connector J1 on the board.

J1 Pin	Function
1	+SIG
2	-SIG
3	+SENSE
4	-SENSE
5	SHIELD (see NOTE below)
6	+EXC
7	-EXC

Table 2-1. J1 Pin Assignments



**Note**

*SHIELD wire connection is not used. Use grounding procedure described in Section 2.3.1. For 6-wire connections, remove jumpers JP1 and JP2.*

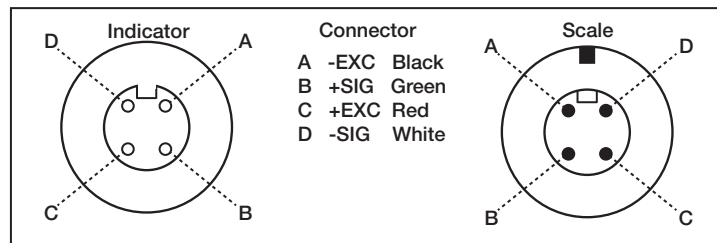


Figure 2-3. Scale/Indicator System Connection

### 2.3.3 Serial Communications

To attach serial communications cables, remove connector J2 from the board (see Figure 2-4). Connect communications cable through cord grip to connector J2 as shown in Table 2-2.

Once cables are attached, reconnect J2 to the header on the board.

The 590 AG Indicator serial port supports full duplex RS-232 communications for connections to printers, PCs, and other attached devices. See Section 3.0 for general configuration information; see Section 3.2.4 for serial port configuration.

J2 Pin	Function
1	RS-232 TxD
2	RS-232 Ground
3	RS-232 RxD

Table 2-2. J2 Pin Assignments

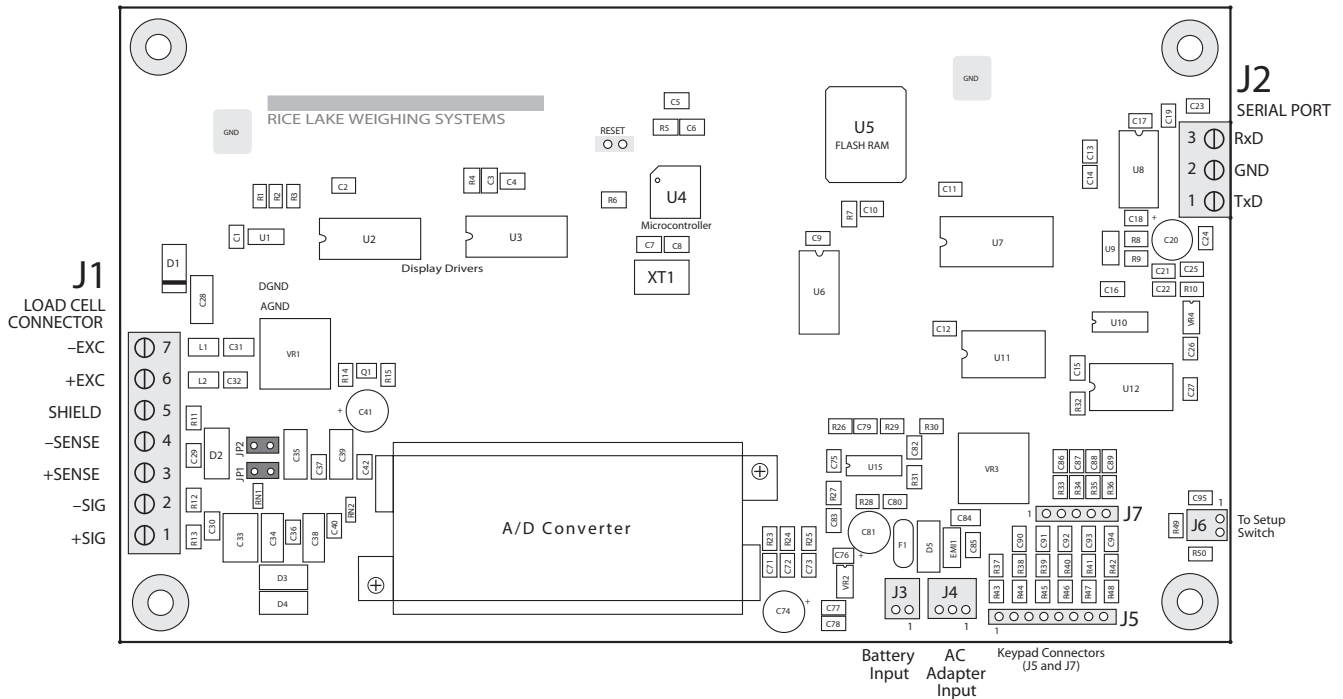


Figure 2-4. 590 AG Indicator CPU Board

## 2.4 Enclosure Reassembly

Once cabling is complete, position the backplate over the enclosure, reconnect battery cable, and reinstall the backplate screws. Use the torque pattern shown in Figure 2-5 to prevent distorting the backplate gasket. Torque screws to 15 in-lb (1.7 N-m).

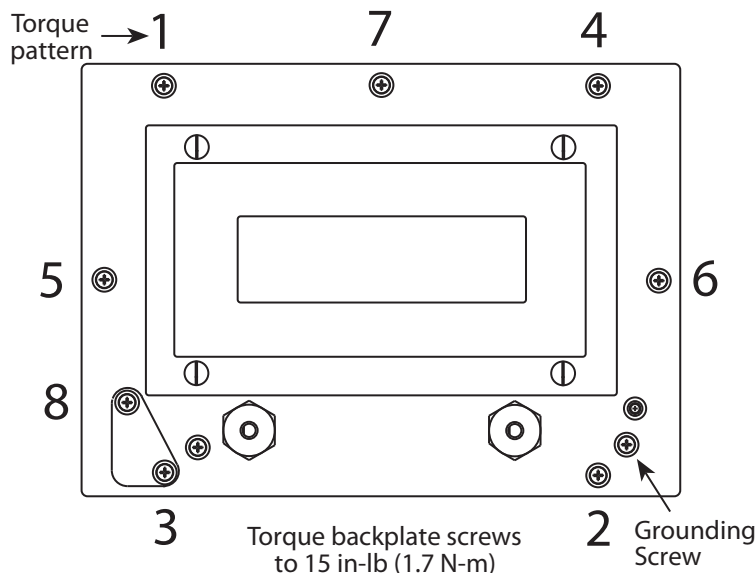


Figure 2-5. Enclosure Backplate




Note

Torqued screws may become less tight as the gasket is compressed during torque pattern, therefore a second torque is required using the same pattern and torque value.

## 2.5 Battery Installation

To install or replace batteries, do the following:

1. Remove the four thumbscrews that hold the battery cover to the enclosure backplate.
2. Install six alkaline C-cell batteries as shown in Figure 2-6.
3. Replace the battery cover and reinstall thumbscrews. Torque thumbscrews to 15 in-lb (1.7 N-m).

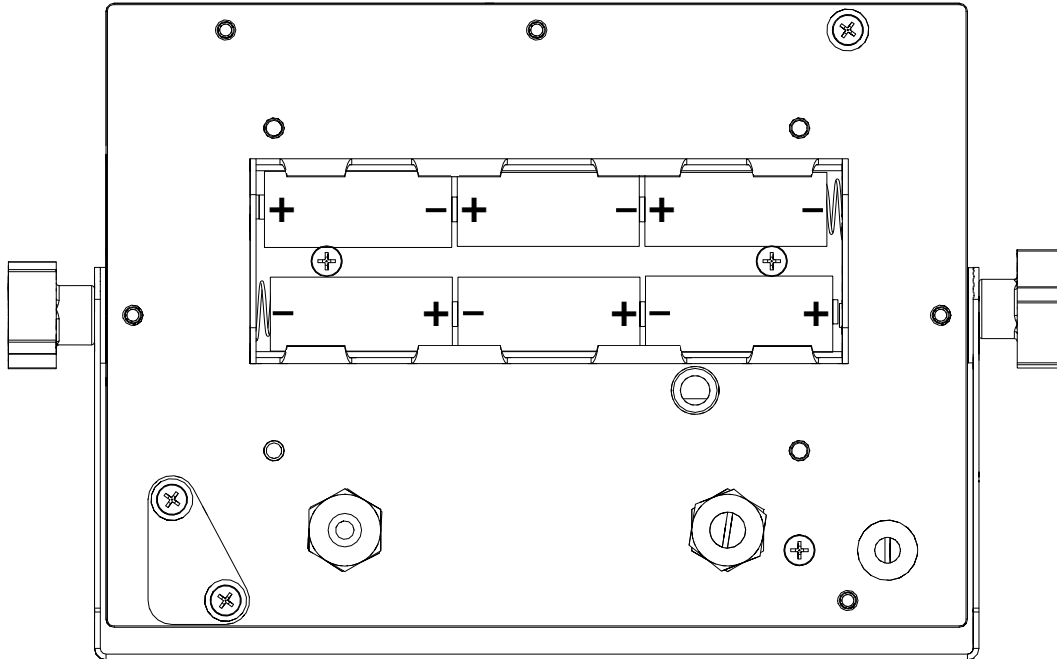

*Figure 2-6. Battery Installation*

## 2.6 AC Adapter

The AC adapter can be used to provide power to the indicator if battery power is low and AC power is available. Use only the adapter supplied with the indicator.

To use the AC adapter, do the following:

1. Remove the top screw from the AC adapter port cover.
2. Loosen the bottom screw, then rotate the port cover to expose the AC adapter port (see Figure 2-7).
3. Reinstall the top screw in the backplate.
4. Plug AC adapter from power outlet to the indicator adapter port.

Close the adapter port cover and reinstall screws as described in Section 2.4 when not using the AC adapter.

**Important** *The 590 AG Indicator enclosure cannot be rated for NEMA 4X/IP66 applications with the AC adapter port cover open.*  
*Do not use the AC adapter in washdown environments.*

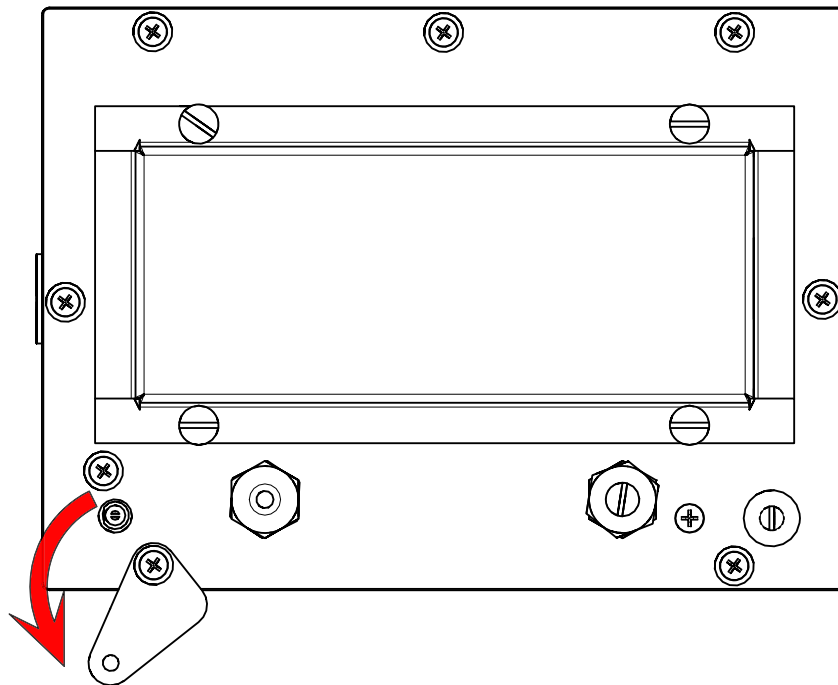


Figure 2-7. AC Adapter Port Cover


## 2.7 Board Removal

If you must remove the CPU board, use the following procedure:

1. Disconnect power to the indicator. Loosen cord grips and remove backplate as described in Section 2.2.
2. Unplug all connections to the CPU board.
3. Remove the four nuts from the corners of the CPU board.
4. Remove the CPU board from the enclosure.

To install a new CPU board, reverse the above procedure. Be sure to reinstall cable ties to secure all cables inside the indicator enclosure. Replace backplate and torque screws as shown in Figure 2-5.

## 2.8 Replacement Parts

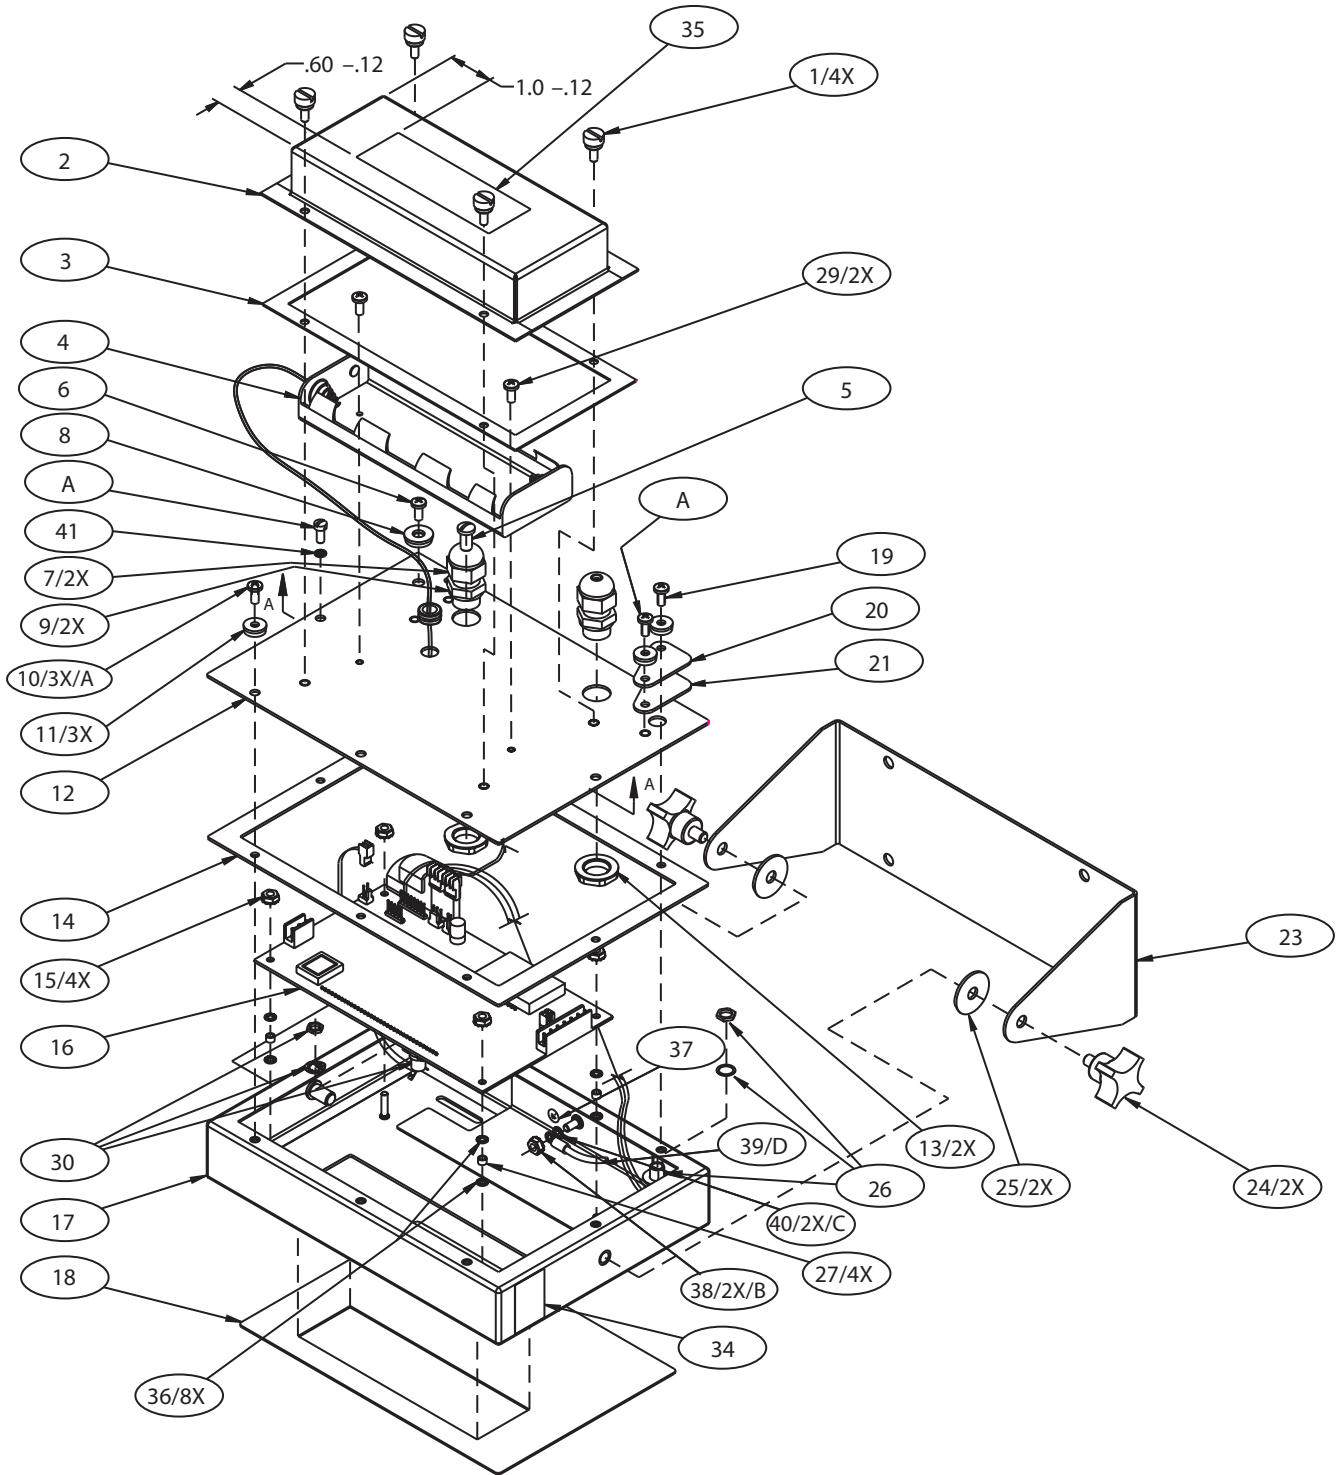



Item #	Part No.	Description (Quantity)	Qty
1	49520	Battery Cover Thumb Screws	4
2	71352	Battery Cover, 3 X 7"	1
3	71354	Battery Cover Gasket	1
4	71448	Battery Holder Assembly	1
5	19538	Cable Grip Plug	1
6	42640	Setup Switch Access Screw, 1/4 X 28NF X 1/4	1
7	15626	Cable Grips, PG9	2
8	44676	Sealing washer for setup switch access screw, #14	1
9	30375	Nylon Seal Rings For Cable Grips	2
10	14862*	Screws, 8-32nc X 3/8	2
11	45042	Sealing Washers, #8	3
12	71435	Enclosure Backplate	1
13	15627	Locknuts, PCN9	2
14	52382	Backplate Gasket	1
15	14626	Kep Nuts, 6-32NC Hex	4
16	52469	Display And CPU Board Assembly	1
17	51971	Enclosure	1
18		Overlay Membrane Panel	1
19	49953	Screw, 8-32NC X 1/2	2
20	49906	AC Adapter Port Cover	1
21	49904	AC Adapter Port Gasket	1
23	53073	Tilt Stand	1
24	30342	Wing Knobs For Tilt Stand	2
25	15144	Nylon Washers For Tilt Stand, 1/4 X 1 X 1/16	2
26	49908	AC Adapter Connector Assembly	1
27	15365	Brass Spacers For Board Mounting	4
28	49905	Battery Cover Pad	2
29	14825	Screws, 4-40NCx 1/4	2
30	49910	Setup Switch Assembly	1
—	15631*	Cable Tie	1
—	15650*	Cable Tie Mount	1
36	15130	Lock Washers, Internal Tooth, No. 6, Type A	8
37	16892	Ground/earth Label	1
38	14626	Kep Nuts, 8-32NC Hex	2
39	45043	Ground Wire, 4 In., No. 8	1
40	15134	Lock Washers, Internal Tooth, No. 8, Type A	2
—	49978	AC Adapter, 115 VAC	1
	49977	AC Adapter, 230 VAC	1
* Additional parts included in parts kit.			

*Table 2-3. 590 Animal Weighing Assembly*

## 3.0 Configuration

To configure the indicator, it must be placed in setup mode. The setup switch is accessed by removing the large fillister head screw on the enclosure backplate. Switch position is changed by inserting a screwdriver into the access hole and pressing the switch.

When the indicator is placed in setup mode, the word **CONFIG** is shown on the display. The CONFIG menu is the first of seven main menus used to configure the indicator. Detailed descriptions of these menus are given in Section 3.2. When configuration is complete, return to the CONFIG menu and press the  $\Delta$  (ZERO) key to exit setup mode, then replace the setup switch access screw.

### 3.1 Configuration Methods

The indicator can be configured by using the front panel keys to navigate through a series of configuration menus or by sending commands or configuration data to the EDP port. Configuration using the menus is described in Section 3.1.3.

Configuration using the EDP port can be accomplished using either the EDP command set described in Section 5.0 or Version 3.0 or later of the *Revolution* configuration utility.

#### 3.1.1 Revolution Configuration

The *Revolution* configuration utility provides the preferred method for configuring the indicator. *Revolution* runs on a personal computer to set configuration parameters for the indicator. When *Revolution* configuration is complete, configuration data is downloaded to the indicator.

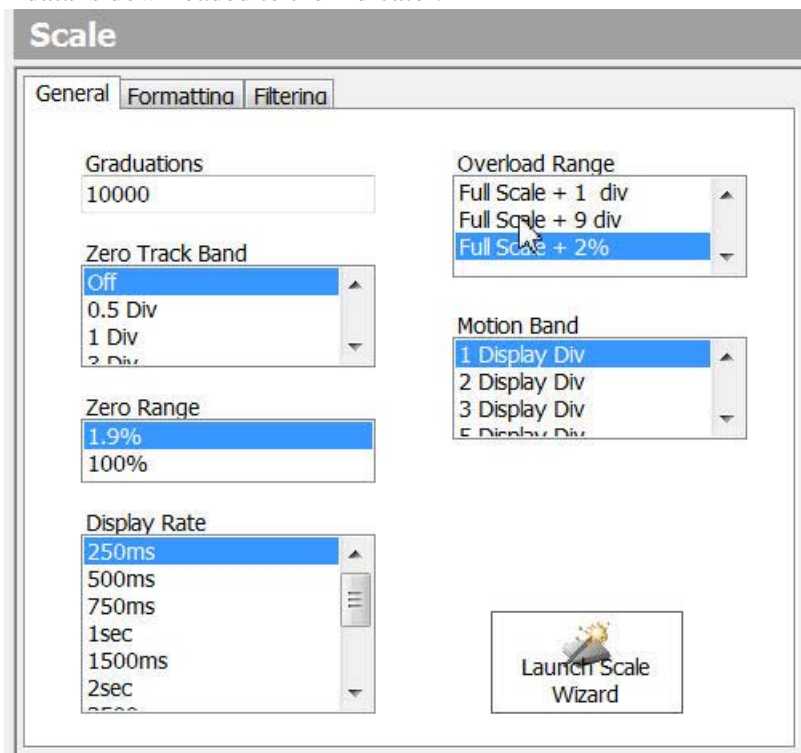


Figure 3-1. Sample Revolution Format Display

*Revolution* supports both uploading and downloading of indicator configuration data. This capability allows configuration data to be retrieved from one indicator, edited, then downloaded to another indicator with an identical hardware configuration.

To use *Revolution*, do the following:

1. Install *Revolution* on an IBM-compatible personal computer.
  - Minimum system specifications:
    - 600+ MHz Intel compatible processor
    - 1 GB of RAM

- 20 GB free hard drive space
  - Windows®<sup>1</sup> XP SP3 (32-bit), Windows Vista™<sup>2</sup> SP2 (x86 or 64), Windows 7 (x86 or x64), or Windows 8 (x86 or x64)
  - RS-232 or TCP/IP connections to an indicator.
  - Recommended system specifications:
    - 1.0 GHz Intel compatible processor
    - 1 GB of RAM
    - 30 GB free hard drive space
    - Windows®<sup>1</sup> XP SP3 (32-bit), Windows Vista™<sup>2</sup> SP2 (x86 or 64), Windows 7 (x86 or x64), or Windows 8 (x86 or x64)
    - RS-232 or TCP/IP connections to an indicator.
2. With both indicator and PC powered off, connect the PC serial port to the RS-232 pins on the indicator serial port.
  3. Power up the PC and the indicator. Use the setup switch to place the indicator in setup mode.
  4. Start the *Revolution* program.

Figure 3-1 shows an example of one of the *Revolution* configuration displays.

*Revolution* provides online help for each of its configuration displays. Parameter descriptions provided in this manual for front panel configuration can also be used when configuring the indicator using *Revolution*: the interface is different, but the parameters set are the same.

### **3.1.2 EDP Command Configuration**

The EDP command set can be used to configure the indicator using a personal computer, terminal, or remote keyboard. Like *Revolution*, EDP command configuration sends commands to the indicator EDP port; unlike *Revolution*, EDP commands can be sent using any external device capable of sending ASCII characters over a serial connection.

EDP commands duplicate the functions available using the indicator front panel and provide some functions not otherwise available. EDP commands can be used to simulate pressing front panel keys, to configure the indicator, or to dump lists of parameter settings. See Section 5.0 for more information about using the EDP command set.

### 3.1.3 Front Panel Configuration

The 590 AG Indicator indicator can be configured using a series of menus accessed through the indicator front panel when the indicator is in setup mode. Table 3-1 summarizes the functions of each of the main menus.

Menu		Menu Function
CONFIG	Configuration	Configure grads, zero tracking, zero range, motion band, overload, sample rate, and digital filtering parameters.
FORMAT	Format	Set format of primary and secondary units, display rate.
CALIBR	Calibration	Calibrate indicator. See Section 4.0 for calibration procedures.
SERIAL	Serial	Configure serial port.
PROGRM	Program	Set power-up and standby modes, display hold mode, regulatory mode, unit ID and consecutive number values.
PFORMT	Print Format	Set print format used for gross, group, and load scale tickets. See Section 7.0 for more information.
VERSION	Version	Display installed software version number.

Table 3-1. Menu Summary


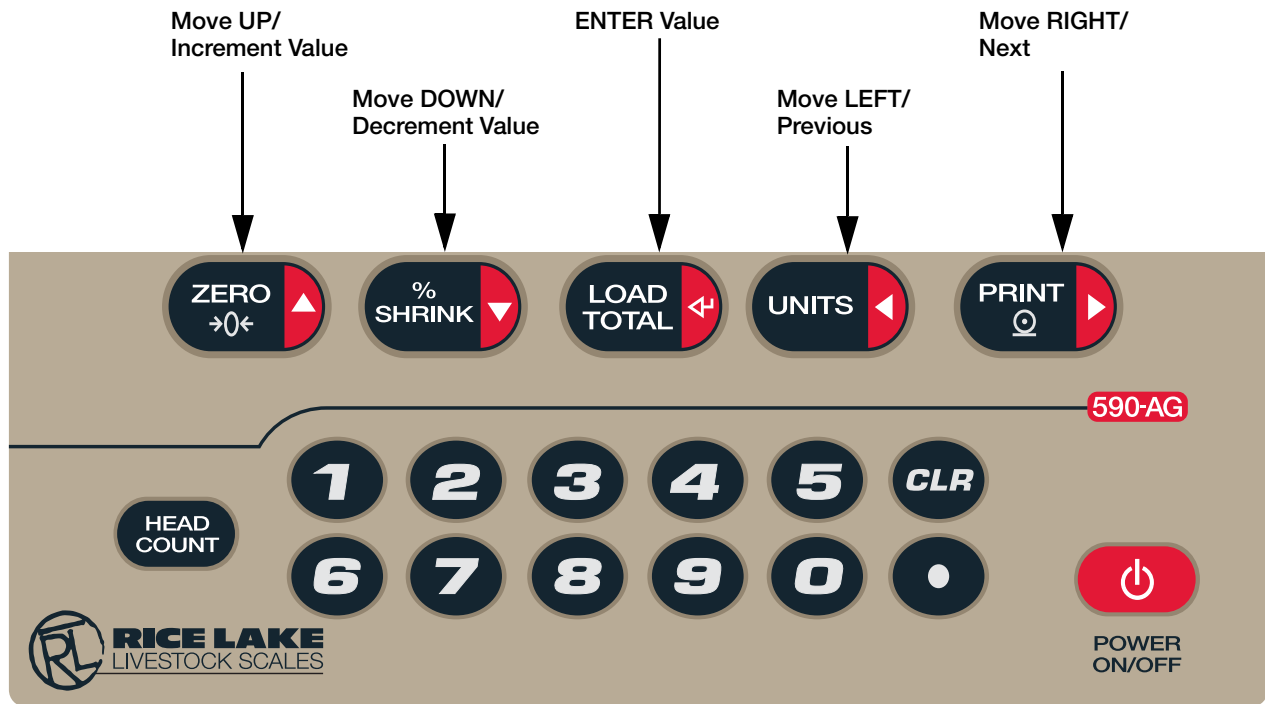


Figure 3-2. Setup Mode Key Functions

Four front panel keys are used as directional keys to navigate through the menus in setup mode (see Figure 3-2). The **UNITS** (◀) and **PRINT** (▶) keys scroll left and right (horizontally) on the same menu level; **ZERO** (△) and **% SHRINK** (▽) move up and down (vertically) to different menu levels. The **LOAD** key (↵) serves as an Enter key for selecting parameter values within the menus. A label over each of these keys identifies the direction provided by the key when navigating through the setup menus.

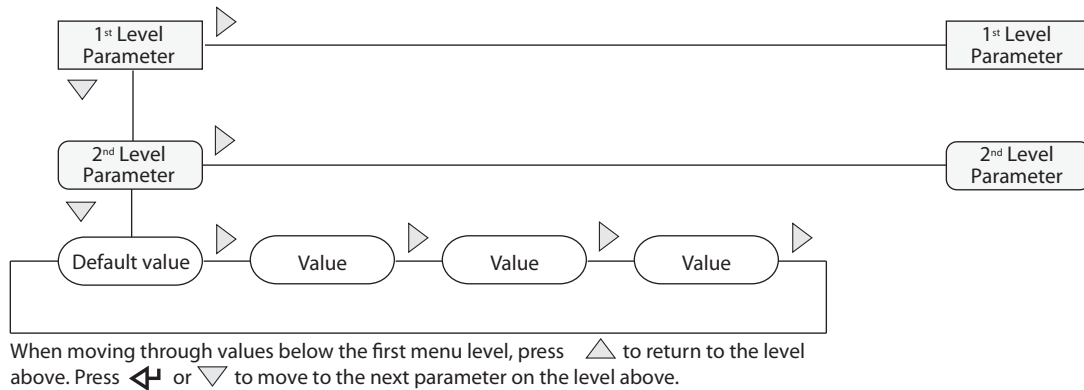

*Figure 3-3. Setup Mode Menu Navigation*

To select a parameter, press ◀ or ▶ to scroll left or right until the desired menu group appears on the display, then press ▽ to move down to the submenu or parameter you want. When moving through the menu parameters, the default or previously selected value appears first on the display.

To change a parameter value, scroll left or right to view the values for that parameter. When the desired value appears on the display, press ↵ to select the value and move back up one level. To edit numeric values, use the numeric keypad on the indicator front panel.

## 3.2 Menu Structures and Parameter Descriptions

The following sections provide graphic representations of the menu structures. In the actual menu structure, the settings you choose under each parameter are arranged horizontally. To save page space, menu choices are shown in vertical columns. The factory default setting appears at the top of each column.

Most menu diagrams are accompanied by a table that describes all parameters and parameter values associated with that menu. Default parameter values are shown in bold type.



**Note** Some characters cannot be accurately represented on the 7-segment front panel LCD display. Section 8.4 lists the 7-segment character set and the alphanumerics they represent.

### 3.2.1 Configuration Menu

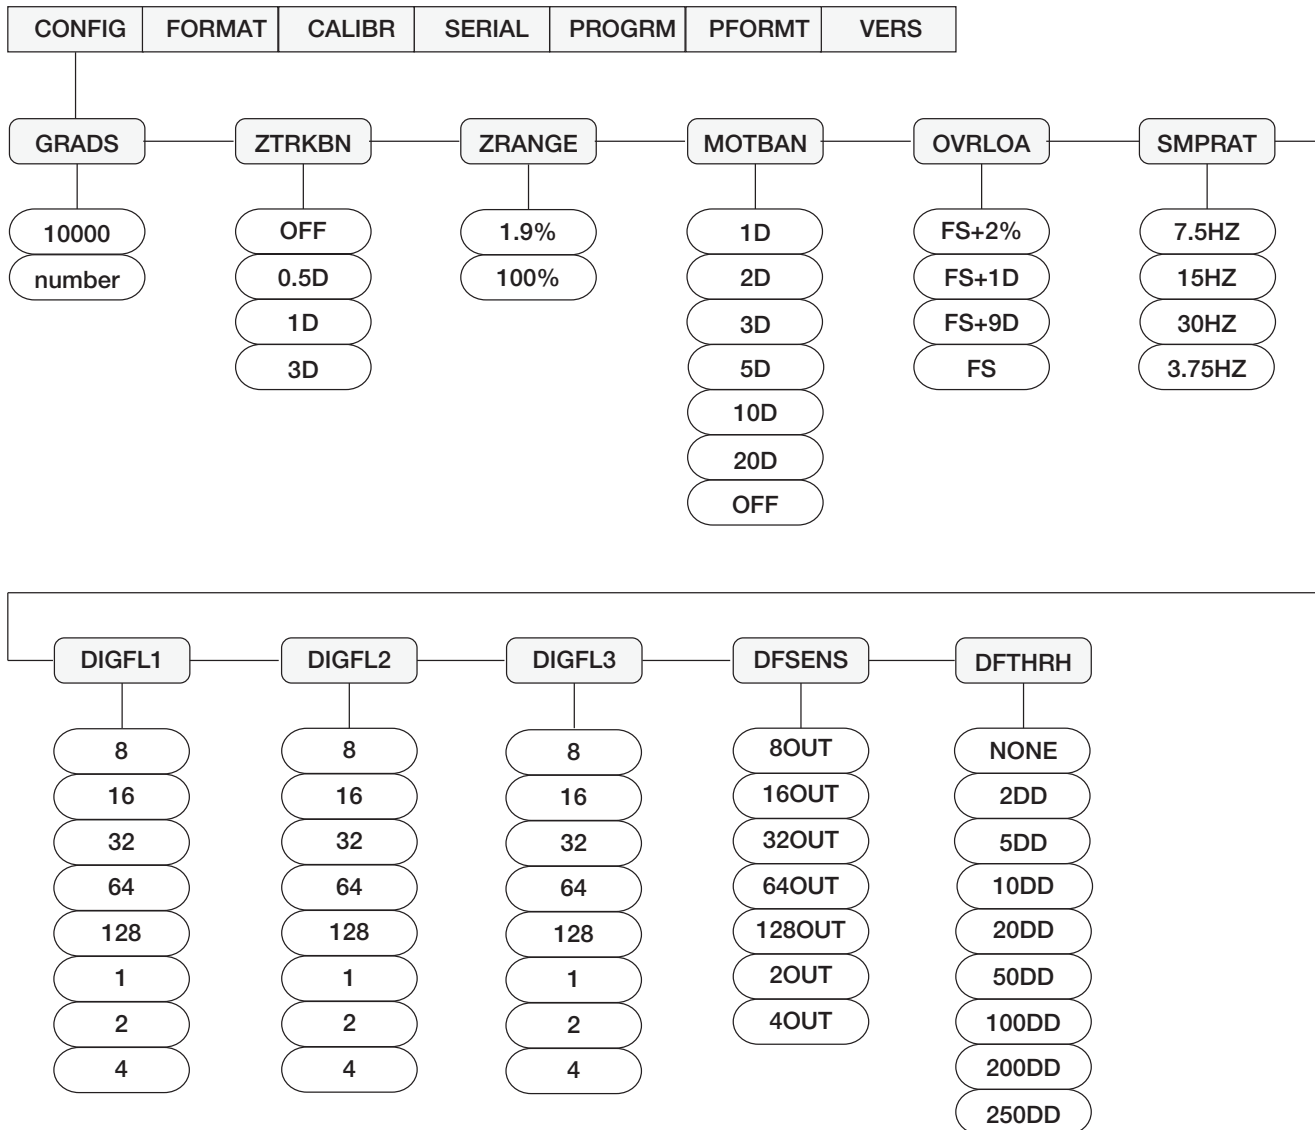


Figure 3-4. Configuration Menu

CONFIG Menu		
Parameter	Choices	Description
GRADS	<b>10000</b> <i>number</i>	Graduations. Specifies the number of full scale graduations. The value entered must be in the range 1–999 999 and should be consistent with legal requirements and environmental limits on system resolution. To calculate GRADS, use the formula, $GRADS = Capacity / Display Divisions$ . Display divisions for primary and secondary units are specified on the FORMAT menu.
ZTRKBN	<b>OFF</b> 0.5D 1D 3D	Zero track band. Automatically zeroes the scale when within the range specified, as long as the input is within the ZRANGE and scale is at standstill. Selections are $\pm$ display divisions. Maximum legal value varies depending on local regulations.
ZRANGE	<b>1.9%</b> 100%	Zero range. Selects the range within which the scale can be zeroed. The 1.9% selection is $\pm 1.9%$ around the calibrated zero point, for a total range of 3.8%. Indicator must be at standstill to zero the scale. Use 1.9% for legal-for-trade applications.
MOTBAN	<b>1D</b> 2D 3D 5D 10D 20D OFF	Motion band. Sets the level, in display divisions, at which scale motion is detected. If motion is not detected for one second or more, the standstill symbol lights. Some operations, including print and zero, require the scale to be at standstill. Maximum legal value varies depending on local regulations.  If OFF is selected, ZTRKBN should also be set to OFF.
OVRL0A	<b>FS+2%</b> FS+1D FS+9D FS	Overload. Determines the point at which the display blanks and an out-of-range error message is displayed. Maximum legal value varies depending on local regulations.
SMPRAT	<b>7.5HZ</b> 15HZ 30HZ 3.75HZ	Sample rate. Selects measurement rate, in samples per second, of the analog-to-digital converter. Lower sample rate values provide greater signal noise immunity.
DIGFL1 DIGFL2 DIGFL3	<b>8</b> 16 32 64 128 1 2 4	Digital filtering. Selects the digital filtering rate used to reduce the effects of mechanical vibration from the immediate area of the scale. Choices indicate the number of A/D conversions that are averaged to obtain the displayed reading. A higher number gives a more accurate display by minimizing the effect of a few noisy readings, but slows down the settling rate of the indicator. See Section 8.6 for more information on digital filtering.
DFSENS	<b>8OUT</b> 16OUT 32OUT 64OUT 128OUT 2OUT 4OUT	Digital filter cutout sensitivity. Specifies the number of consecutive readings that must fall outside the filter threshold (DFTHRH parameter) before digital filtering is suspended.
DFTHRH	<b>NONE</b> 2DD 5DD 10DD 20DD 50DD 100DD 200DD 250DD	Digital filter cutout threshold. Specifies the filter threshold, in display divisions. When a specified number of consecutive scale readings (DFSENS parameter) fall outside of this threshold, digital filtering is suspended. If NONE is selected, the filter is always enabled.

### 3.2.2 Format Menu

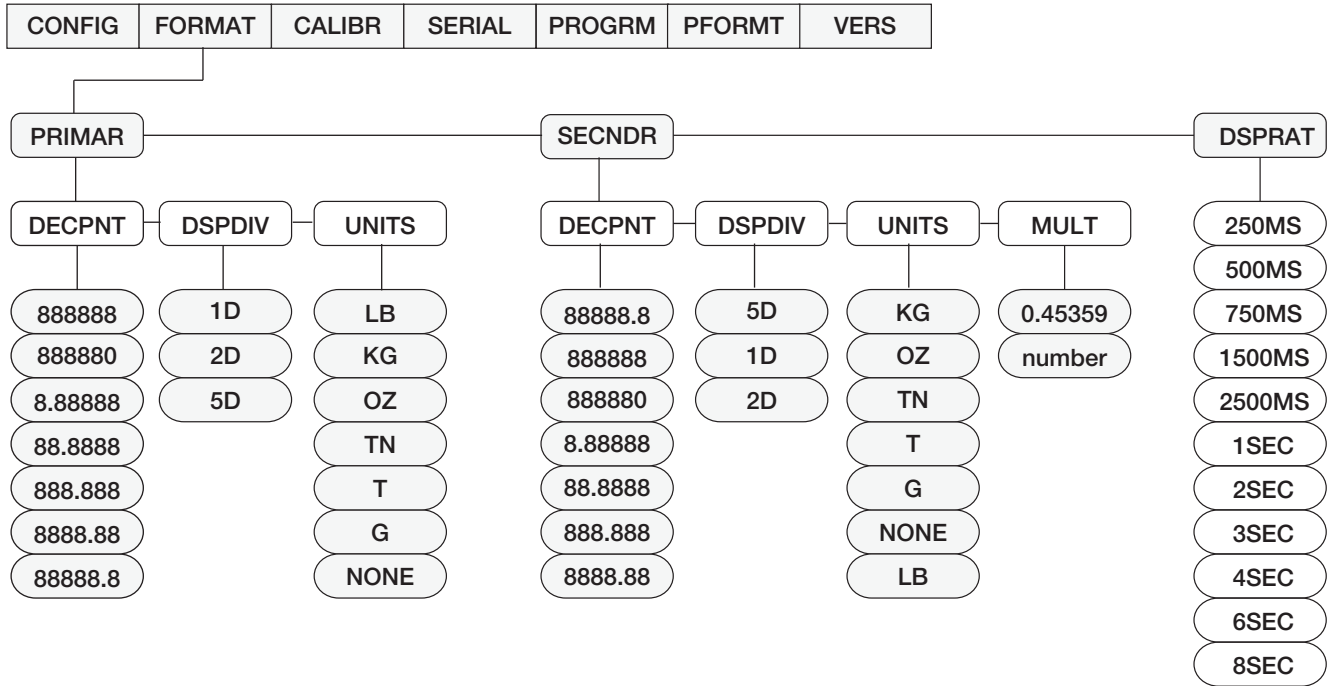




Figure 3-5. Format Menu

FORMAT Menu		
Parameter	Choices	Description
<i>Format submenu</i>		
PRIMAR	DECPNT DSPDIV UNITS	Primary Units – Specifies the decimal position, display divisions, and units used for the primary units. See below for submenu parameter descriptions.
<i>Primary Units submenus</i>		
DECPNT	<b>888888</b> 888880 8.88888 88.8888 888.888 8888.88 88888.8	Decimal point location. Specifies the location of the decimal point or dummy zeroes in the primary unit display. Value should be consistent with local legal requirements.
DSPDIV	<b>1D</b> 2D 5D	Display divisions. Selects the minimum division size for the primary units displayed weight.
UNITS	<b>lb</b> kg OZ TN T G NONE	Specifies primary units for displayed and printed weight. Values are: lb = pound; kg = kilogram; OZ = ounce; TN = short ton; T = metric ton; G = gram   <b>Note</b> <i>Indicators sold outside North America are configured with kg for both primary and secondary units.</i>



<b>FORMAT Menu</b>		
<b>Parameter</b>	<b>Choices</b>	<b>Description</b>
<i>Format submenu</i>		
SECNDR	DECPNT DSPDIV UNITS	Secondary Units – Specifies the decimal position, display divisions, units, and conversion multiplier used for the secondary units. See below for submenu parameter descriptions.
<i>Secondary Units submenus</i>		
DECPNT	<b>88888.8</b> 888888 888880 8.88888 88.8888 888.888 8888.88	Decimal point location. Determines the location of the decimal point or dummy zero in the secondary unit display.
DSPDIV	<b>5D</b> 1D 2D	Display Divisions – Selects the value of minimum division size of the displayed weight.
UNITS	<b>kg</b> OZ TN T G lb NONE	Specifies secondary units for displayed and printed weight. Values are: lb = pound; kg = kilogram; OZ = ounce; TN = short ton; T = metric ton; G = gram   <b>Note</b> <i>Indicators sold outside North America are configured with kg for both primary and secondary units.</i>
MULT	<b>0.45359</b> <i>Enter other choices via keyboard</i>	Multiplier – Specifies the conversion factor by which the primary units are multiplied to obtain the secondary units. The default is 0.45359, which is the conversion factor for changing pounds to kilograms. See Section 8.5 for a list of multipliers.  To toggle between primary and secondary units, press the UNITS key.
<i>Format submenu</i>		
DSPRAT	<b>250MS</b> 500MS 750MS 1500MS 2500MS 1SEC 2SEC 3SEC 4SEC 6SEC 8SEC	Display rate. Sets the update rate for displayed values. Values are in milliseconds (MS) or seconds (SEC).

### 3.2.3 Calibration Menu

See Section 4.0 for calibration procedures.

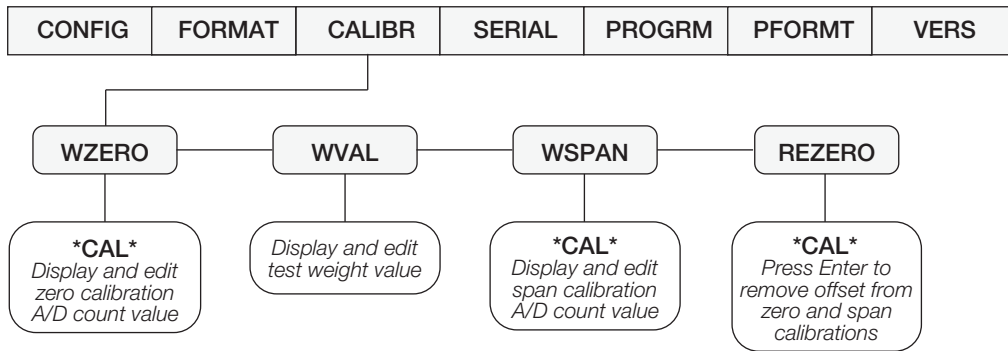


Figure 3-6. Calibration Menu

CALIBR Menu		
Parameter	Choices	Description
WZERO	—	Calibrate zero, display and edit the zero calibration A/D count value.
WVAL	—	Display and edit the test weight value.
WSPAN	—	Calibrate span, display and edit the span calibration A/D count value.
REZERO	—	Press Enter to remove an offset value from the zero and span calibrations. Use this parameter only after WZERO and WSPAN have been set. See Section 4.1 for more information about using this parameter.

Table 3-2. Calibration Menu Parameters

### 3.2.4 Serial Menu

See Section 8.2 for information about the *590 AG Indicator* serial data format.

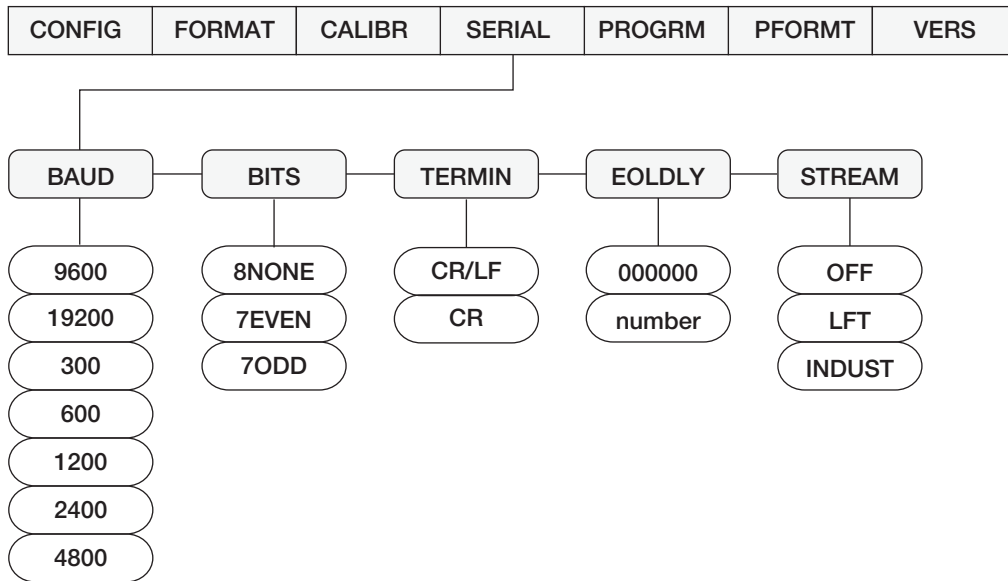


Figure 3-7. Serial Menu

SERIAL Menu		
Parameter	Choices	Description
BAUD	9600 19200 300 600 1200 2400 4800	Baud rate. Selects the transmission speed for the EDP port.
BITS	8NONE 7EVEN 7ODD	Selects number of data bits and parity of data transmitted from the EDP port.
TERMIN	CR/LF CR	Termination character. Selects termination character for data sent from the EDP port.
EOLDLY	0 number	End-of-line delay. Sets the delay period, in 0.1-second intervals, from when a formatted line is terminated to the beginning of the next formatted serial output. Value specified must be in the range 0-255, in tenths of a second (10 = 1 second).
STREAM	OFF LFT INDUST	Selects whether continuous data output is streamed from the serial port. Select LFT for legal-for-trade applications in which the streamed data must match the current displayed weight. Select INDUST to stream the latest weight data, regardless of the value displayed. See Section 8.2 for information about the continuous data format.

Table 3-3. Serial Menu Parameters

### 3.2.5 Program Menu

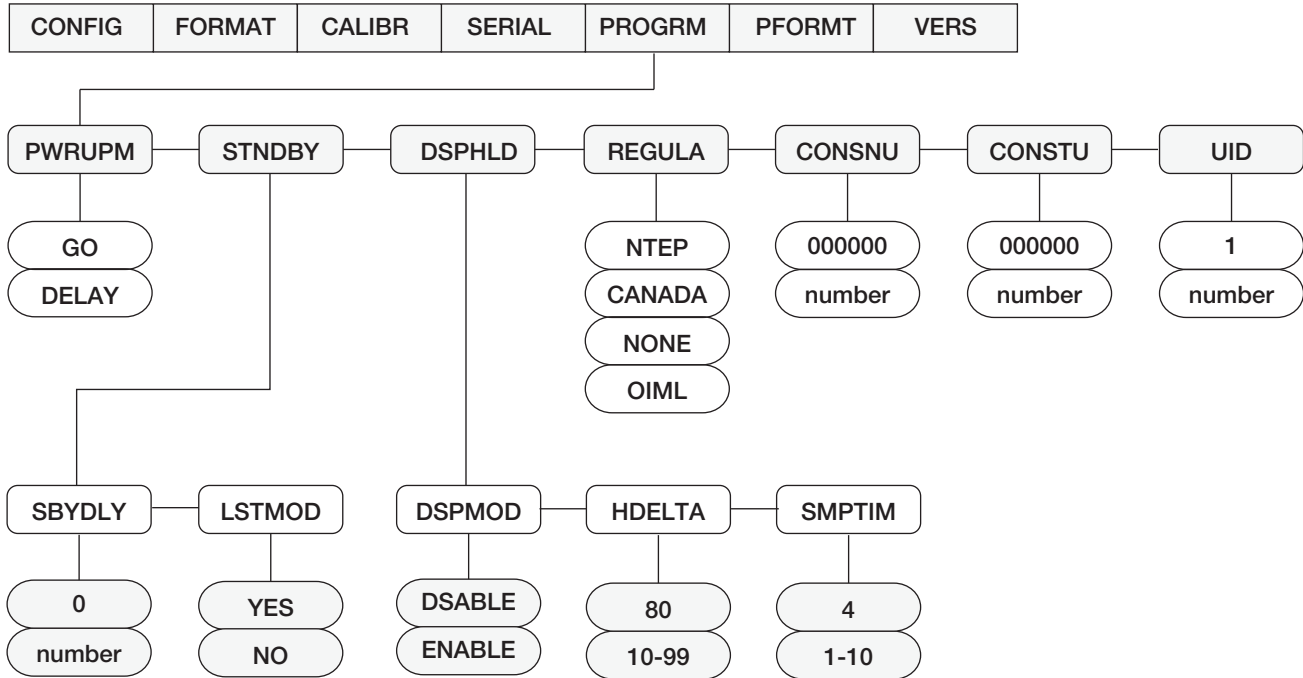


Figure 3-8. Program Menu

PROGRAM Menu		
Parameter	Choices	Description
PWRUPM	GO DELAY	Power up mode. In GO mode, the indicator goes into operation immediately after a brief power up display test.  In DELAY mode, the indicator performs a power up display test, then enters a 30-second warm up period. If no motion is detected during the warm up period, the indicator becomes operational when the warm up period ends; if motion is detected, the delay timer is reset and the warm up period repeated.
STNDBY	SBYDLY LSTMOD	Specifies standby mode delay and whether indicator returns to the last operating mode or performs a power-up sequence when standby mode ends. See sub-menu parameter descriptions below.
STNDBY sub-menu parameters		
SBYDLY	0 <i>number</i>	Standby mode delay. Specifies the number of minutes the indicator must be inactive before entering standby mode. Valid values are 0 (off) or 1–120 minutes.  The indicator enters standby mode if no key presses, serial communications, or scale motion occur for the length of time specified on this parameter. Set this parameter to 0 to disable standby mode.
LSTMOD	YES NO	Last mode. Specifies whether the indicator resumes operation in the last mode it was in before entering standby mode (YES) or performs the standard power-up sequence (NO).

Table 3-4. Program Menu Parameters

PROGRM Menu		
Parameter	Choices	Description
PROGRM menu parameters continued		
DSPHLD	DSPMOD HDELTA SMPTIM	Specifies whether operator wants to use the display hold mode, set the hold delta percentage and the display hold sampling time. See sub-menu parameter descriptions below.
DSPHLD sub-menu parameters		
DSPMOD	<b>DSABLE</b> ENABLE	Display hold mode – Specify whether display hold mode is to be used or not. If it is enabled, the indicator will sample the scale for SMPTIM and display the average weight.
HDELTA	<b>80</b> 10-99	Delta percentage that the display value must drop before scale returns to live weighing. Valid values are 10-99 percent with a default of 80 percent.
SMPTIM	<b>4</b> 1-10	The amount of time in seconds that the indicator will sample the scale before it displays the average of those samples. Valid values are 1-10 seconds with a default of 4 seconds.
PROGRM menu parameters continued		
REGULA	<b>NTEP</b> CANADA NONE OIML	Regulatory mode. Specifies the regulatory agency having jurisdiction over the scale site. <ul style="list-style-type: none"> <li>• OIML, NTEP, and CANADA modes allow a tare to be acquired at any weight greater than zero. NONE allows tares to be acquired at any weight value.</li> <li>• OIML, NTEP, and CANADA modes allow a tare to be cleared only if the gross weight is at no load. NONE allows tares to be cleared at any weight value.</li> <li>• NTEP and OIML modes allow a new tare to be acquired even if a tare is already present. In CANADA mode, the previous tare must be cleared before a new tare can be acquired.</li> <li>• NONE, NTEP and CANADA modes allow the scale to be zeroed in either gross or net mode as long as the current weight is within the specified ZRANGE. In OIML mode, the scale must be in gross mode before it can be zeroed; pressing the ZERO key in net mode clears the tare.</li> </ul>
CONSNU	<b>000000</b> number	Consecutive numbering. Allows sequential numbering for print operations. The consecutive number value is incremented following each print operation.  The initial value of this parameter is set to the start up value specified on the CONSTU parameter. Changing either CONSTU or CONSNU immediately resets the consecutive number used for printing.
CONSTU	<b>000000</b> number	Consecutive number start up value. Specifies the initial consecutive number (CONSNU) value used when the indicator is powered on.
UID	<b>1</b> number	Unit ID. Specify a unit identifier for the indicator in the range 1–999999. The unit ID can be added to print ticket formats to identify the indicator used to generate the ticket.

*Table 3-4. Program Menu Parameters (Continued)*

### 3.2.6 Print Format Menu

See Section 7.0 for information about custom print formatting.

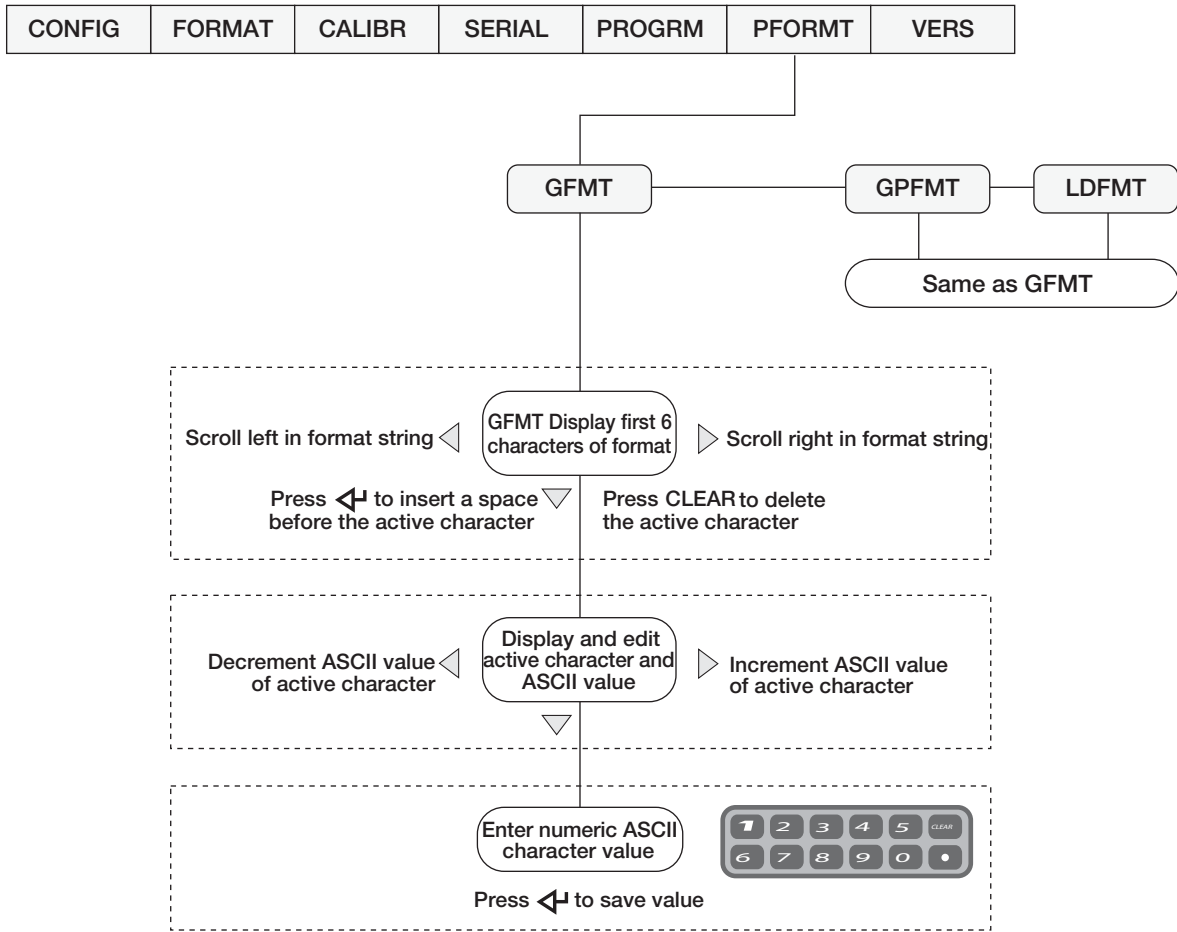


Figure 3-9. Print Format Menu

### 3.2.7 Version Menu

The VERS menu is used to check the software version installed in the indicator. There are no parameters associated with the Version menu: when selected, the indicator displays the installed software version number.

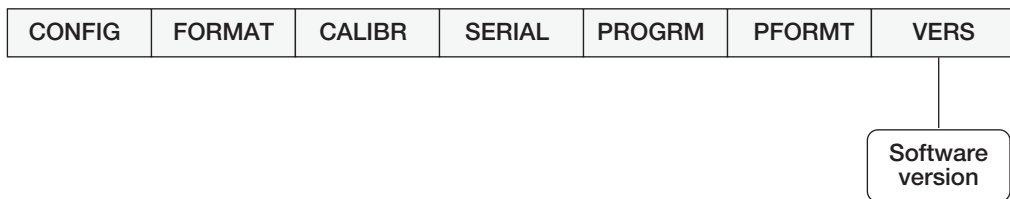


Figure 3-10. Version Menu

## 4.0 Calibration

The 590 AG Indicator can be calibrated using the front panel, EDP commands, or *Revolution*<sup>®</sup>. Each method consists of the following steps:

- Zero calibration
- Entering the test weight value
- Span calibration
- Optional rezero calibration for test weights using hooks or chains.

The following sections describe the calibration procedure for each of the calibration methods.

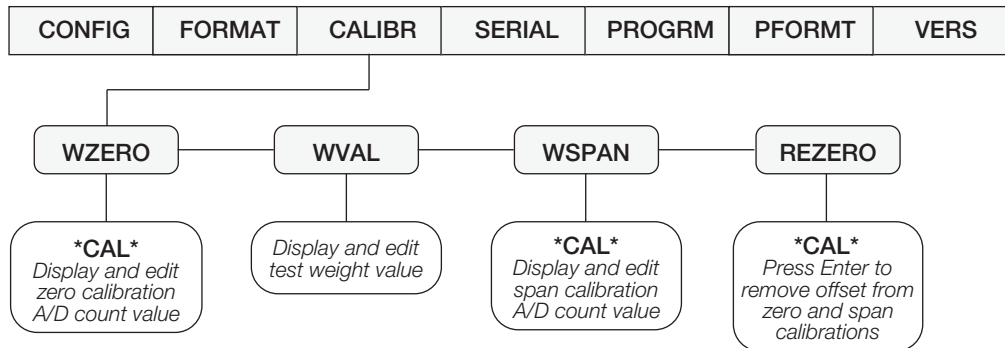


Figure 4-1. Calibration (CALIBR) Menu

### 4.1 Front Panel Calibration

To calibrate the indicator using the front panel, do the following:

1. Place the indicator in setup mode (display reads *CONFIG*) and remove all weight from the scale platform. If your test weights require hooks or chains, place the hooks or chains on the scale for zero calibration.
2. Press  $\triangleright$  until the display reads *CALIBR* (see Figure 4-1). Press  $\nabla$  to go to zero calibration (*WZERO*).
3. With *WZERO* displayed, press  $\leftarrow$  to calibrate zero. The indicator displays **\*CAL\*** while calibration is in progress. When complete, the A/D count for the zero calibration is displayed. Press  $\leftarrow$  again to save the zero calibration value and go to the next prompt (*WVAL*).
4. With *WVAL* displayed, place test weights on the scale and press  $\leftarrow$  to show the test weight value. Use the numeric keypad to enter the actual test weight, then press  $\leftarrow$  to save the value and go to span calibration (*WSPAN*).
5. With *WSPAN* displayed, press  $\leftarrow$  to calibrate span. The indicator displays **\*CAL\*** while calibration is in progress. When complete, the A/D count for the span calibration is displayed. Press  $\leftarrow$  again to save the span calibration value and go to the next prompt (*REZERO*).
6. The rezero function is used to remove a calibration offset when hooks or chains are used to hang the test weights.
  - If no other apparatus was used to hang the test weights during calibration, remove the test weights and press  $\triangle$  to return to the *CALIBR* menu.
  - If hooks or chains were used during calibration, remove these and the test weights from the scale. With all weight removed, press  $\leftarrow$  to rezero the scale. This function adjusts the zero and span calibration values. The indicator displays **\*CAL\*** while the zero and span calibrations are adjusted. When complete, the adjusted A/D count for the zero calibration is displayed. Press  $\leftarrow$  to enter the value, then press  $\triangle$  to return to the *CALIBR* menu.
7. Press  $\triangleleft$  until the display reads *CONFIG*, then press  $\triangle$  to exit setup mode.

### 4.2 EDP Command Calibration

To calibrate the indicator using EDP commands, the indicator EDP port must be connected to a terminal or personal computer. See Section 2.3.3 for EDP port pin assignments; see Section 5.0 for more information about using EDP commands.

Once the indicator is connected to the sending device, do the following:

1. Place the indicator in setup mode (display reads *CONFIG*) and remove all weight from the scale platform. If your test weights require hooks or chains, place the hooks or chains on the scale for zero calibration.

2. Send the WZERO EDP command to calibrate zero. The indicator displays \*CAL\* while calibration is in progress.
3. Place test weights on the scale and use the WVAL command to enter the test weight value in the following format:  
WVAL=nnnnnn<CR>
4. Send the WSPAN EDP command to calibrate span. The indicator displays \*CAL\* while calibration is in progress.
5. To remove an offset value, clear all weight from the scale, including hooks or chains used to hang test weights, then send the REZERO EDP command. The indicator displays \*CAL\* while the zero and span calibrations are adjusted.
6. Send the KUPARROW EDP command to exit setup mode.

## 4.3 Revolution Calibration

To calibrate the indicator using *Revolution*, the indicator EDP port must be connected to a PC running the *Revolution* configuration software.

Use the following procedure to calibrate the indicator:

1. Select **Calibration Wizard** from the *Revolution* tools menu.
2. Revolution uploads calibration data from the indicator then presents the information in a display like that shown in Figure 4-2.



Figure 4-2. Revolution Calibration Wizard

3. Enter the **Value of Test Weight** to be used for span calibration then click **OK**.
4. The zero calibration dialog box prompts you to remove all weight from the scale. Clear the scale and click **OK** to begin zero calibration.



**Note** If your test weights require hooks or chains, place the hooks or chains on the scale for zero calibration.

5. When zero calibration is complete, the span calibration dialog box prompts you to place test weights on the scale for span calibration. Place test weights on the scale then click **OK**.
6. When calibration is complete, the **New Settings** fields of the indicator calibration display are filled in. Click **Exit** to save the new values and return to the *Revolution* main menu; to restore the previous calibration values, click **Restore Settings**.



## 5.0 EDP Commands

The indicator can be controlled by a personal computer or remote keyboard connected to the indicator EDP port. Control is provided by a set of EDP commands that can simulate front panel key press functions, display and change setup parameters, and perform reporting functions. The EDP port provides the capability to print configuration data or to save that data to an attached personal computer. This section describes the EDP command set and procedures for saving and transferring data using the EDP port.

### 5.1 The EDP Command Set

The EDP command set can be divided into five groups: key press commands, reporting commands, the RESETCONFIGURATION special function command, parameter setting commands, and transmit weight data commands.

When the indicator processes an EDP command, it responds with the message **OK**. The **OK** response verifies that the command was received and has been executed. If the command is unrecognized or cannot be executed, the indicator responds with **??**.

The following sections list the commands and command syntax used for each of these groups.

#### 5.1.1 Key Press Commands

Key press EDP commands (see Table 5-1) simulate pressing the keys on the front panel of the indicator. These commands can be used in both setup and weighing mode. Several of the commands serve as “pseudo” keys, providing functions that are not represented by a key on the front panel.

For example, to enter a 5.5% shrink value using EDP commands:

1. Type K5 and press ENTER (or RETURN).
2. Type KDOT and press ENTER.
3. Type K5 and press ENTER.
4. Type KSHRINK and press ENTER.

Command	Function
KZERO	Press the ZERO key
KUNITS	Press the UNITS key
KPRIM	Go to primary units (pseudo key)
KSEC	Go to secondary units (pseudo key)
KPRINT	Press the PRINT key
KCLR	Press the CLEAR key
KLEFTARROW	In setup mode, move left in the menu
KRIGHTARROW	In setup mode, move right in the menu
KUPARROW	In setup mode, move up in the menu
KDOWNARROW	In setup mode, move down in the menu
K0	Press number 0 (zero)
K1	Press number 1
K2	Press number 2
K3	Press number 3
K4	Press number 4
K5	Press number 5
K6	Press number 6
K7	Press number 7
K8	Press number 8
K9	Press number 9
KDOT	Press the decimal point (.)
KENTER	Press the ENTER key
KHEADCNT	Press the HEAD COUNT key
KSHRINK	Press the % SHRINK key
KTOTBATCH	Press the LOAD TOTAL key

Table 5-1. Key Press EDP Commands

## 5.1.2 Reporting Commands

Reporting commands (see Table 5-2) send specific information to the EDP port. These commands can be used in both setup mode and normal mode.

### 5.1.3 The RESETCONFIGURATION Command

The RESETCONFIGURATION command can be used to restore all configuration parameters to their default values. Before issuing this command, the indicator must be placed in setup mode or test mode (press and hold setup switch for approximately four seconds to enter test mode).

Sending this command, followed by the RS (RESET) EDP command, is equivalent to using the DEFLT function on the TEST menu. See Section 8.7 for more information about test mode and using the TEST menu.

**NOTE:** All load cell calibration settings are lost when the RESETCONFIGURATION command is run.

### 5.1.4 Parameter Setting Commands

Parameter setting commands allow you to display or change the current value for a particular configuration parameter (Table 5-3 through Table 5-8).

Current configuration parameter settings can be displayed in either setup mode or normal mode using the following syntax:

`command<ENTER>`

Most parameter values can be changed in setup mode only. Use the following command syntax when changing parameter values:

`command=value<ENTER>`

where *value* is either a number or a parameter value. Use no spaces before or after the equal (=) sign. If you type an incorrect command, the display reads ?? . Changes to the parameters do not take effect until you exit setup mode.

For example, to set the motion band parameter to 5, type the following:

`MOTBAND=5D<ENTER>`

Command	Function
DUMPALL	List all parameter values
VERSION	Write 590 AG Indicator software version
RS	Reset the indicator
P	Write current displayed weight with units identifier. The P command returns the current displayed weight value to the EDP port. If the indicator is in an underrange or overload condition, the weight value is replaced with ##### (overload) or %%%%%%%%% (underrange).
S	Write one frame of stream format

Table 5-2. EDP Reporting Commands

Command	Description	Values
GRADS	Graduations	1-999 999
ZTRKBND	Zero track band	OFF, 0.5D, 1D, 3D
ZRANGE	Zero range	1.9%, 100%
MOTBAND	Motion band	1D, 2D, 3D, 5D, 10D, 20D, OFF
OVRLOAD	Overload	FS+2%, FS+1D, FS+9D, FS
SMPRAT	Sample rate	15HZ, 30HZ, 3.75HZ, 7.5HZ
DIGFLTR1 DIGFLTR2 DIGFLTR3	Digital filtering	1, 2, 4, 8, 16, 32, 64
DFSSENS	Digital filter cutout sensitivity	2OUT, 4OUT, 8OUT, 16OUT, 32OUT, 64OUT, 128OUT
DFTHRHR	Digital filter cutout threshold	NONE, 2DD, 5DD, 10DD, 20DD, 50DD, 100DD, 200DD, 250DD

Table 5-3. CONFIG EDP Commands

Command	Description	Values
PRI.DECPNT	Primary units decimal position	8.88888, 88.8888, 888.888, 8888.88, 88888.8, 888888, 888880
PRI.DSPDIV	Primary units display divisions	1D, 2D, 5D
PRI.UNITS	Primary units	LB, KG, OZ, TN, T, G, NONE
SEC.DECPNT	Secondary units decimal position	8.88888, 88.8888, 888.888, 8888.88, 88888.8, 888888, 888880
SEC.DSPDIV	Secondary units display divisions	1D, 2D, 5D
SEC.UNITS	Secondary units	LB, KG, OZ, TN, T, G, NONE
SEC.MULT	Secondary units multiplier	0.00000–999999
DSPRATE	Display rate	250MS, 500MS, 750MS, 1500MS, 2500MS, 1SEC, 2SEC, 3SEC, 4SEC, 6SEC, 8SEC

Table 5-4. *FORMAT EDP Commands*

Command	Description	Values
WZERO	Zero calibration	–
WVAL	Test weight value	<i>test_weight_value</i>
WSPAN	Span calibration	–
REZERO	Rezero	–
LC.CD	Set deadload coefficient	<i>value</i>
LC.CW	Set span coefficient	<i>value</i>

Table 5-5. *CALIBR EDP Commands*

Command	Description	Values
EDP.BAUD	Baud rate	300, 600, 1200, 2400, 4800, 9600, 19200
EDP.BITS	Data bits/parity	8NONE, 7EVEN, 7ODD
EDP.TERMIN	Termination character	CR/LF, CR
EDP.EOLDLY	End-of-line delay	0–255 (0.1-second intervals)
EDP.STREAM	Stream format	OFF, LFT, INDUST

Table 5-6. *SERIAL EDP Commands*

Command	Description	Values
PWRUPMD	Power up mode	GO, DELAY
SBYDLY	Standby delay	0–120
LSTMOD	Last mode	YES, NO
DISPMOD	Display hold mode	ENABLE, DSABLE
HOLD_DELTA	Hold delta percent	10-99
SAMPTIME	Display hold sample time	1-10 (seconds)
SHRINK	Shrink percent	0.00-99.00
REGULAT	Regulatory compliance	NTEP, CANADA, NONE, OIML
CONSNUM	Consecutive number	0–999 999
CONSTUP	Consecutive number start-up value	0–999 999
UID	Unit identifier	0–999 999

Table 5-7. *PROGRM EDP Commands*



Command	Description	Values
GFMT	Gross demand print format string	See Section 7.0 for detailed information
GPFMT	Group print format string	
LDFMT	Load print format string	

Table 5-8. PFORMAT EDP Commands

### 5.1.5 Normal Mode Commands

The serial transmit weight data commands (see Table 5-9) transmit data to the EDP port on demand. The transmit weight data commands are valid only in normal operating mode.

Command	Description	Response Format
SX	Start EDP streaming	OK or ??
EX	Stop EDP streaming	OK or ??
XG	Transmit gross weight in displayed units	nnnnnn UU
XG2	Transmit gross weight in non-displayed units	where nnnnnn is the weight value, UU is the units.

Table 5-9. Normal Mode EDP Commands

## 5.2 Saving and Transferring Data

Connecting a personal computer to the 590 AG Indicator EDP port allows you to save indicator configuration data to the PC or to download configuration data from the PC to an indicator. The following sections describe the procedures for these save and transfer operations.

### 5.2.1 Saving Indicator Data to a Personal Computer

Configuration data can be saved to a personal computer connected to the EDP port. The PC must be running a communications program such as PROCOMMPLUS®. See Section 2.3.3 for information about serial communications wiring and EDP port pin assignments.

When configuring the indicator, ensure that the values set for the BAUD and BITS parameters on the SERIAL menu match the baud rate, bits, and parity settings configured for the serial port on the PC.

To save all configuration data, place the indicator in setup mode and send the DUMPALL EDP command to the indicator. The 590 AG Indicator responds by sending all configuration parameters to the PC as ASCII-formatted text.

### 5.2.2 Downloading Configuration Data from PC to Indicator

Configuration data saved on a PC can be downloaded from the PC to an indicator. This procedure is useful when a number of indicators with similar configurations are set up or when an indicator is replaced.

To download configuration data, connect the PC to the EDP port as described in Section 5.2.1. Place the indicator in setup mode and use the PC communications software to send the saved configuration data to the indicator. When transfer is complete, calibrate the indicator as described in Section 4.0.



#### Note

- Calibration settings are included in the configuration data downloaded to the indicator. If the receiving indicator is a direct replacement for another 590 AG Indicator and the attached scale is not changed, recalibration is not required.
- When downloading configurations that include changed serial communications settings, edit the data file to place the serial communications changes at the end of the file. Communication between the PC and indicator will be lost once the indicator receives settings for baud rate (BAUD parameter) or data bits and parity (BITS parameter) that do not match those configured for the PC.

## 6.0 Animal Weighing Operation

---

The 590 AG Indicator provides two modes for displaying the weight of the animals on the scale.

- Live mode – When Display Hold mode is disabled, indicator display always shows the current scale weight.
- Hold mode – When enabled, the indicator will sample the scale for the number of seconds configured and will then display & hold the average of the weight sampled.



**Note** *The holding of a display value is signified by the blinking of the current units annunciator. The display hold is released when the weight on the scale drops the hold delta percentage configured, the 'Load Total' key is pressed, the indicator is power cycled or it is reset.*

### 6.1 Weighing Animals

Weighing animals is done in groups of one or more animals. A load is made up of one or more groups.

#### 6.1.1 Display Hold Settings

When using Display Hold, the following setting should be set prior to weighing. See Figure 3-8.

- Set the DSPMOD parameter to ENABLE.
- Set the SMPTIM parameter.
- Set the HDELTA parameter.



**Note** *If default values of SMPTIM and HDELTA are sufficient, these parameters do not need to be changed.*

#### 6.1.2 Shrink Factor Setting

Enter the shrink factor on the keypad and press the % **Shrink** key. That value will be applied to every weighment until the shrink factor is changed.

- The shrink factor limits are 0.00 to 99.00 percent.
- The shrink factor is printed on each group ticket.
- When the Load Total key is pressed, the shrink calculations are based on the shrink factor used for the last group weighed.
- The entered shrink factor is stored and will survive power cycles.

#### 6.1.3 Head Count Setting



**Note** *When Display Hold Mode is disabled, the scale needs to be at standstill to enter the head count. When Display Hold Mode is enabled, it does not need to be at stand still.*

Enter the head count of animals on the scale on the keypad and press the Head Count key when the scale is at standstill.

- If display hold mode is enabled, the LCD will display **-SPL-** for the time the scale is being sampled (SMPTIM).
- When sampling is complete or if not in display hold mode, group ticket data will immediately be sent to the serial port.



**Note** *If display hold mode was enabled, the current units annunciator will blink showing that the display is being held.*

#### 6.1.4 Weighing Groups

If using Display Hold mode (See Section 6.1.1) and/or Shrink Factor (see Section 6.1.2), enter them before starting the weigh process.

1. Load the first group onto scale.
2. Enter the Head Count (See Section 6.1.3).



**Note** When the first group of a load is complete, an arrow annunciator on the right side of the LCD display points to Group Mode (group) to signify the indicator is in the middle of collecting data from group's that make up a load.

Since power standby mode may engage which powers down the indicator, this indicates to the operator that the indicator is still in the middle of collecting load data when the indicator is powered back on. The previous group data and accumulating totals are saved in case of power down in the middle of collecting load groups.

3. If a reprint of the last group ticket is required, press the Print key to resend that data to the serial port. A REPRINT header and trailer will print on ticket.
4. Repeat head count (Section 6.1.3), and shrink factor (Section 6.1.2) if required, as needed for the number of groups that will be in the load.
5. When all groups for a load are complete, press the Load Total key and the Load Ticket data will be sent to the serial port. This data includes accumulated totals of head count, total weight, etc. See Figure 6-1.



**Note** After the load data is sent to the serial port, the totaling accumulators are reset to zero, the Group Mode (group) annunciator is cleared and the display hold is released if it was indicated.

Group Weight Format

```
=====
Group Weight - 1
Head Count: 4
Weight: 429.7 lb with 5.00% Shrink
Avg Weight: 107.4 lb
Accumulated Gross Weight: 740.6 lb
```

Group Weight Reprint Format

```
=====
**** REPRINT ****
*                *

Group Weight - 1
Head Count: 4
Weight: 429.7 lb with 5.00% Shrink
Avg Weight: 107.4 lb
Accumulated Gross Weight: 740.6 lb
*                *
**** REPRINT ****
```

Total Load Weight Format

```
=====
Total Load Weight
Groups: 3

Total Gross Weight: 1408.6 lb

Total Head Count: 12

Total Weight: 1408.6 lb with Shrink
Shrink Percentage: 0.00%

Avg Weight: 117.3 lb
```

Figure 6-1. Print Examples

6. Another load can now be started.



**Note** There is no reprint ability for the Load Total data. Pressing the Print key when not in Group Mode (group), will send the current gross weight displayed to the serial port.

## 7.0 Print Formatting

The 590 AG Indicator provides three print formats, GFMT, GPFMT, and LDFMT that determine the format of the printed output when the PRINT key is pressed or when a KPRINT EDP command is received.

Each print format can be customized to include up to 300 characters of information, such as company name and address, on printed tickets. You can use the indicator front panel (PFORMAT menu), EDP commands, or the *Revolution* configuration utility to customize the print formats.

### 7.1 Print Formatting Commands

Table 7-1 lists commands you can use to format the gross and net print formats. Commands included in the format strings must be enclosed between < and > delimiters. Any characters outside of the delimiters are printed as text on the ticket. Text characters can include any ASCII character that can be printed by the output device.

Command	Description
<G>	Gross weight in displayed units
<G2>	Gross weight in non-displayed units
<GP>	Group count value
<HC>	Head count value
<SH>	Shrink value (percent)
<HCT>	Total head count value
<HCS>	Head count gross weight in displayed units – shrink applied
<HCA>	Head count average weight in displayed units
<TGS>	Total gross weight in displayed units – shrink applied
<TGW>	Total gross weight in displayed units
<TGA>	Total gross average weight in displayed units
<CN>	Consecutive number
<UID>	Indicator ID number
<NL $nn$ >	New line ( $nn$ = number of termination [<CR/LF> or <CR>] characters)*
<SP $nn$ >	Space ( $nn$ = number of spaces)*
<SU>	Toggle weight data format (formatted/unformatted)**
Gross weights are 10 digits in length, including sign, followed by a space and a two-digit units identifier. Total field length with units identifier is 13 characters.	
UID and consecutive number (CN) fields are 1–6 characters in length, as required.	
* If $nn$ is not specified, 1 is assumed. Value must be in the range 1–99.	
** After receiving an SU command, the indicator sends unformatted data until the next SU command is received. Unformatted data omits decimal points, leading and trailing characters.	

Table 7-1. Print Format Commands

The default print formats are shown in Table 7-2:

Format	Default Format String	Sample Output
GFMT	<G> GROSS<NL2>	123456.7 lb GROSS
GPFMT	Group Weight: <GP><NL> Head Count: <HC><NL> Weight: <HCS> with <SH> Shrink<NL> Avg Weight: <HCA><NL> Accumulated Gross Weight: <TGW><NL2>	Group Weight - 1 Head Count: 4 Weight: 429.7 lb with 5.00% Shrink Avg Weight: 107.4 lb Accumulated Gross Weight: 740.6 lb
LDFMT	<NL>Total Load Weight<NL> Groups: <GP><NL2>  Total Gross Weight: <TGW><NL2>  Total Head Count: <HCT><NL2>  Total Weight: <TGS> with Shrink<NL> Shrink Percentage: <SH><NL2>  Avg Weight: <TGA><NL3>	Total Load Weight Groups: 3  Total Gross Weight: 1408.6 lb  Total Head Count: 12  Total Weight: 1408.6 lb with Shrink Shrink Percentage: 0.00%  Avg Weight: 117.3 lb

Table 7-2. Default Print Formats



**Note**

- The <G2> command listed in Table 7-1 prints the gross weight in non-displayed units—that is, in the units not currently displayed on the indicator.
- ID numbers included in the print format string (<ID> command) must be set using the UID EDP command.
- The 300-character limit of each print format string includes the output field length of the print formatting commands, not the command length. For example, if the indicator is configured to show a decimal point, the <G> command generates an output field of 13 characters: the 10-character weight value (including decimal point), one space, and a two-digit units identifier.

## 7.2 Customizing Print Formats

The following sections describe procedures for customizing the GFMT, GPFMT, and LDFMT formats using the EDP port, the front panel (PFORMT menu), and the *Revolution* configuration utility.

### 7.2.1 Using the EDP Port

With a personal computer, terminal, or remote keyboard attached to the 590 AG Indicator EDP port, you can use the EDP command set to customize the print format strings.

To view the current setting of a format string, type the name of the string (GFMT, GPFMT, or LDFMT) and press ENTER.

For example, to check the current configuration of the GFMT format, type GFMT and press ENTER. The indicator responds by sending the current configuration for the gross format:

```
GFMT=<G> GROSS<NL2>
```

To change the format, use the GFMT, GPFMT, or LDFMT EDP command followed by an equals sign (=) and the modified print format string.

For example, to add the name and address of a company to the gross format, you could send the following EDP command:

```
GFMT=MLC SHIPPING<NL>1357 WEST HOWARD ROAD<NL>BIGTOWN<NL2><G> GROSS<NL>
```

A ticket printed using this format might look like the following:

```
MLC SHIPPING
1357 WEST HOWARD ROAD
BIGTOWN

27862 LB GROSS
```



## 7.2.2 Using the Front Panel

If you have no access to equipment for communication through the EDP port or are working at a site where such equipment cannot be used, you can use the PFORMT menu (see Figure 7-1) to customize the print formats.

Using the PFORMT menu, you can edit the print format strings by changing the decimal values of the ASCII characters in the format string.



**Note** Lower-case letters and some special characters cannot be displayed on the 590 AG Indicator front panel (see the ASCII character chart in Section 8.3) and are shown as blanks. The 590 AG Indicator can send or receive any ASCII character; the character printed depends on the particular ASCII character set implemented for the receiving device.

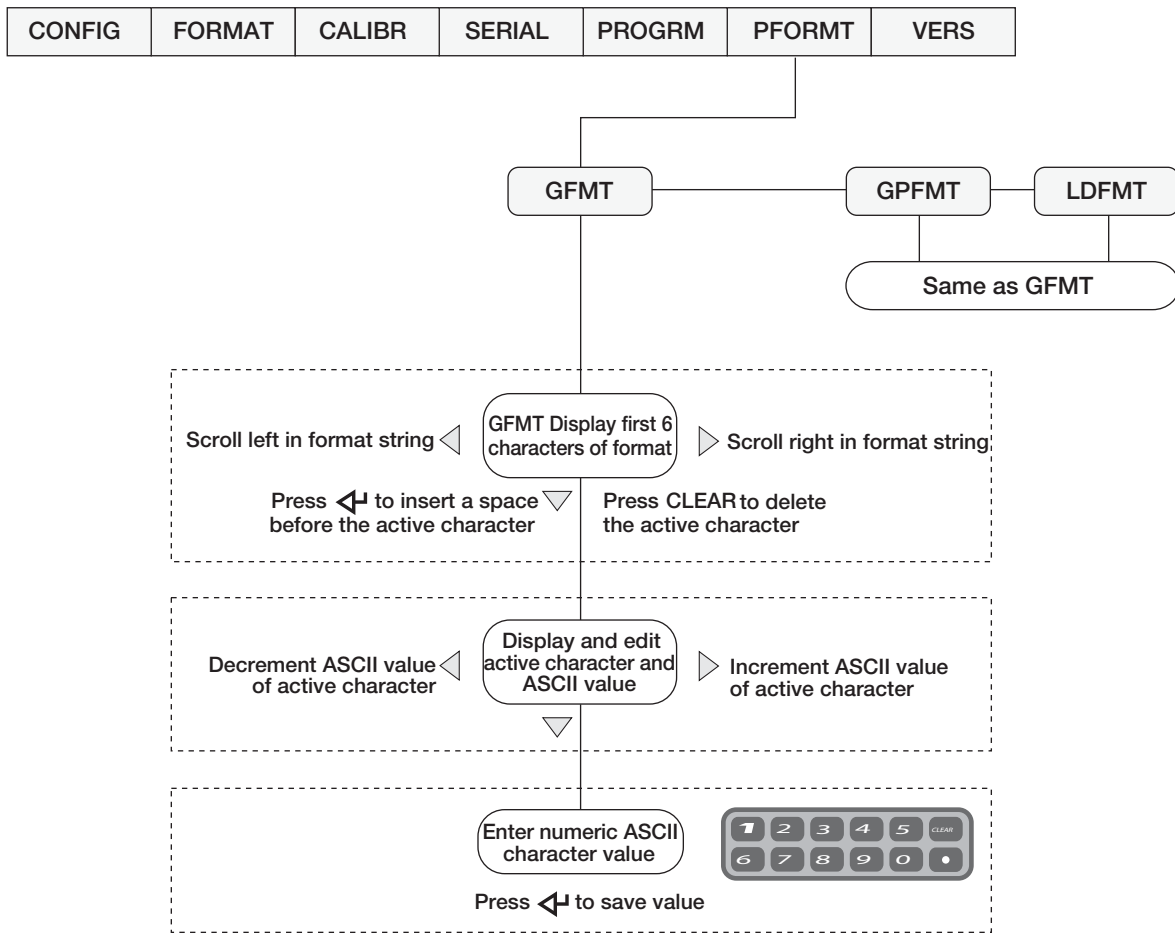


Figure 7-1. PFORMT Menu, Showing Alphanumeric Character Entry Procedure

## 7.2.3 Using Revolution

The *Revolution* configuration utility provides a print formatting grid with a tool bar. The grid allows you to construct the print format without the formatting commands (<NL> and <SP>) required by the front panel or EDP command methods. Using *Revolution*, you can type text directly into the grid, then select weight value fields from the tool bar and place them where you want them to appear on the printed ticket.

Figure 7-2 shows an example of the *Revolution* print formatting grid.

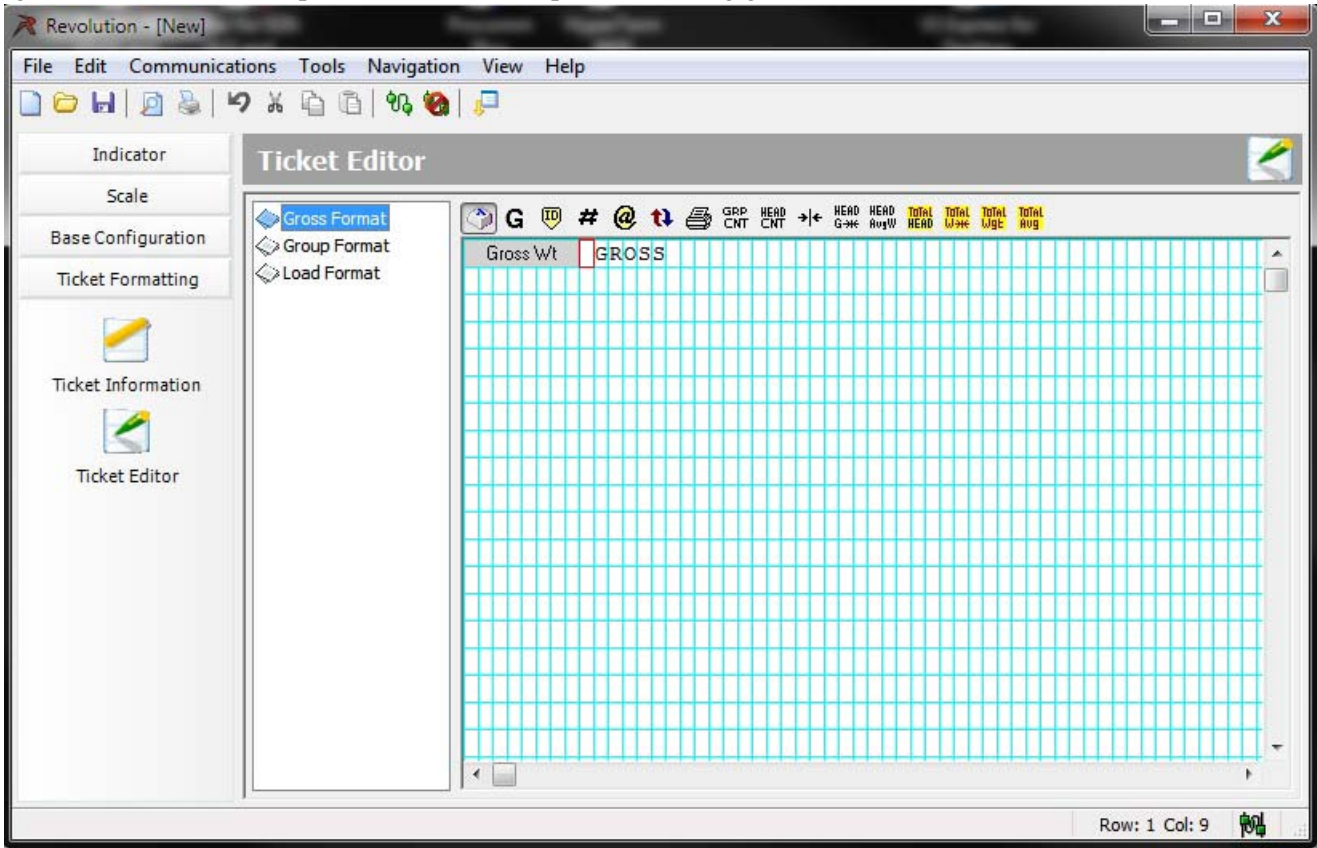


Figure 7-2. Revolution Print Format Grid

# 8.0 Appendix

## 8.1 Error Messages

The 590 AG Indicator provides a number of front panel error messages to assist in problem diagnosis. Table 8-1 lists these messages and their meanings.

Error Message	Description	Solution
ADCERR	A/D not responding	Call Rice Lake Weighing Systems (RLWS) Service.
ADCKSM	A/D coefficient checksum error	
CFCKSM	Configuration checksum error	Use TEST menu to perform DEFLT (restore defaults) procedure, then recalibrate load cells.
DSPERR	Display error	Call RLWS Service.
EEPERR	EEPROM write error	
LCCKSM	Load cell calibration checksum error	Recalibrate load cells.
LCPERR	Load cell power failed	Replace batteries. If error still shown, call RLWS Service.
OVERFL	Overflow error	Weight value too large (> 999999) to be displayed. Check configuration.
PFCKSM	Print format checksum error	Check print formats for errors.
RAMERR	RAM test failed	Call RLWS Service.
TARERR	EEPROM read error	Use TEST menu to perform DEFLT (restore defaults) procedure, then recalibrate load cells.
VIREE	EEPROM error	Use TEST menu to perform DEFLT (restore defaults) procedure, then recalibrate load cells and reconfigure indicator.
-----	Overrange error	Gross value exceeds overload limit. Check configuration.
-----	A/D underrange	Weight value too small (< -99999) to be displayed or A/D reading < -2.5 mV. Check load cell input signal.
STNDBY	Standby mode	Press any key to return to operating mode.

Table 8-1. 590 AG Indicator Error Messages

## 8.2 Continuous Output (Stream) Format

Figure 8-1 shows the continuous output format sent to the 590 AG Indicator serial port when the STREAM parameter (SERIAL menu) is set to either LFT or INDUST.

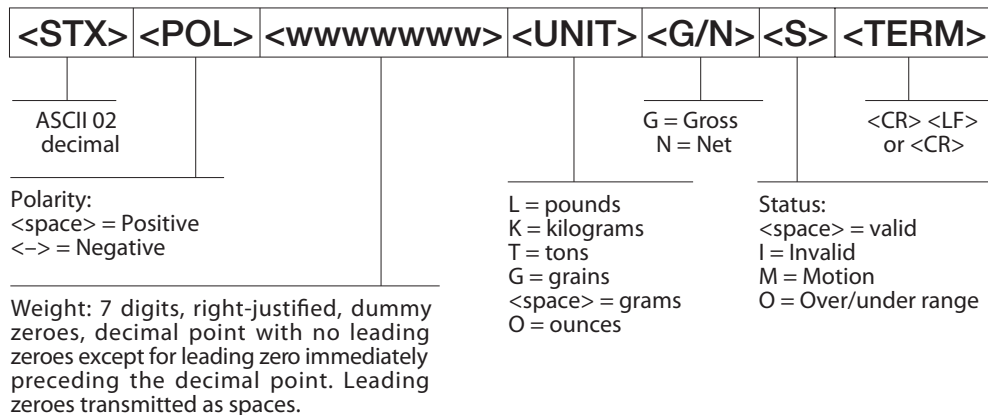


Figure 8-1. Continuous Output Data Format

## 8.3 ASCII Character Chart

Use the decimal values for ASCII characters listed in Table 8-2 and Table 8-3 when specifying print format strings on the *590 AG Indicator* PFORMAT menu. The actual character printed depends on the character mapping used by the output device. The *590 AG Indicator* can send or receive any ASCII character value (decimal 0–255), but the indicator display is limited to the set described in Section 8.4 on page 42.

Control	ASCII	Dec	Hex	ASCII	Dec	Hex	ASCII	Dec	Hex	ASCII	Dec	Hex
Ctrl-@	NUL	00	00	space	32	20	@	64	40	`	96	60
Ctrl-A	SOH	01	01	!	33	21	A	65	41	a	97	61
Ctrl-B	STX	02	02	“	34	22	B	66	42	b	98	62
Ctrl-C	ETX	03	03	#	35	23	C	67	43	c	99	63
Ctrl-D	EOT	04	04	\$	36	24	D	68	44	d	100	64
Ctrl-E	ENQ	05	05	%	37	25	E	69	45	e	101	65
Ctrl-F	ACK	06	06	&	38	26	F	70	46	f	102	66
Ctrl-G	BEL	07	07	'	39	27	G	71	47	g	103	67
Ctrl-H	BS	08	08	(	40	28	H	72	48	h	104	68
Ctrl-I	HT	09	09	)	41	29	I	73	49	i	105	69
Ctrl-J	LF	10	0A	*	42	2A	J	74	4A	j	106	6A
Ctrl-K	VT	11	0B	+	43	2B	K	75	4B	k	107	6B
Ctrl-L	FF	12	0C	,	44	2C	L	76	4C	l	108	6C
Ctrl-M	CR	13	0D	-	45	2D	M	77	4D	m	109	6D
Ctrl-N	SO	14	0E	.	46	2E	N	78	4E	n	110	6E
Ctrl-O	SI	15	0F	/	47	2F	O	79	4F	o	111	6F
Ctrl-P	DLE	16	10	0	48	30	P	80	50	p	112	70
Ctrl-Q	DC1	17	11	1	49	31	Q	81	51	q	113	71
Ctrl-R	DC2	18	12	2	50	32	R	82	52	r	114	72
Ctrl-S	DC3	19	13	3	51	33	S	83	53	s	115	73
Ctrl-T	DC4	20	14	4	52	34	T	84	54	t	116	74
Ctrl-U	NAK	21	15	5	53	35	U	85	55	u	117	75
Ctrl-V	SYN	22	16	6	54	36	V	86	56	v	118	76
Ctrl-W	ETB	23	17	7	55	37	W	87	57	w	119	77
Ctrl-X	CAN	24	18	8	56	38	X	88	58	x	120	78
Ctrl-Y	EM	25	19	9	57	39	Y	89	59	y	121	79
Ctrl-Z	SUB	26	1A	:	58	3A	Z	90	5A	z	122	7A
Ctrl-[	ESC	27	1B	;	59	3B	[	91	5B	{	123	7B
Ctrl-\	FS	28	1C	<	60	3C	\	92	5C		124	7C
Ctrl-]	GS	29	1D	=	61	3D	]	93	5D	}	125	7D
Ctrl-^	RS	30	1E	>	62	3E	^	94	5E	~	126	7E
Ctrl- <sub>~</sub>	US	31	1F	?	63	3F	_	95	5F	DEL	127	7F

Table 8-2. ASCII Character Chart (Part 1)

ASCII	Dec	Hex	ASCII	Dec	Hex	ASCII	Dec	Hex	ASCII	Dec	Hex
Ç	128	80	á	160	A0		192	C0	α	224	E0
ü	129	81	í	161	A1		193	C1	β	225	E1
é	130	82	ó	162	A2		194	C2	Γ	226	E2
â	131	83	ú	163	A3		195	C3	π	227	E3
ä	132	84	ñ	164	A4		196	C4	Σ	228	E4
à	133	85	Ñ	165	A5		197	C5	σ	229	E5
å	134	86	ª	166	A6		198	C6	μ	230	E6
ç	135	87	º	167	A7		199	C7	τ	231	E7
ê	136	88	¿	168	A8		200	C8	Φ	232	E8
ë	137	89		169	A9		201	C9	Θ	233	E9
è	138	8A	¬	170	AA		202	CA	Ω	234	EA
ï	139	8B	½	171	AB		203	CB	δ	235	EB
î	140	8C	¼	172	AC		204	CC	∞	236	EC
ì	141	8D	¡	173	AD		205	CD	φ	237	ED
Ä	142	8E	«	174	AE		206	CE	€	238	EE
Å	143	8F	»	175	AF		207	CF	∩	239	EF
É	144	90		176	B0		208	D0	≡	240	F0
æ	145	91		177	B1		209	D1	±	241	F1
Æ	146	92		178	B2		210	D2	≥	242	F2
ô	147	93		179	B3		211	D3	≤	243	F3
ö	148	94		180	B4		212	D4	∫	244	F4
ò	149	95		181	B5		213	D5	∫	245	F5
û	150	96		182	B6		214	D6	÷	246	F6
ù	151	97		183	B7		215	D7	≈	247	F7
ÿ	152	98		184	B8		216	D8	°	248	F8
Ö	153	99		185	B9		217	D9	•	249	F9
Ü	154	9A		186	BA		218	DA		250	FA
ç	155	9B		187	BB		219	DB		251	FB
£	156	9C		188	BC		220	DC		252	FC
¥	157	9D		189	BD		221	DD	²	253	FD
Pts	158	9E		190	BE		222	DE		254	FE
f	159	9F		191	BF		223	DF		255	FF

Table 8-3. ASCII Character Chart (Part 2)

## 8.4 Front Panel Display Characters

Figure 8-2 shows the 7-segment LCD character set used to display alphanumeric characters on the 590 AG Indicator front panel.

!	-	9	Ee	Qq	]
"	.	:	Ff	Rr	^
#	/	;	Gg	Ss	_
\$	0	<	Hh	Tt	`
%	1	=	li	Uu	{
&	2	>	Jj	Vv	
'	3	?	Kk	Ww	}
(	4	@	Ll	Xx	~
)	5	Aa	Mm	Yy	
*	6	Bb	Nn	Zz	
+	7	Cc	Oo	[	
,	8	Dd	Pp	\	

Figure 8-2. 590 AG Indicator Display Characters

## 8.5 Conversion Factors for Secondary Units

The 590 AG Indicator has the capability to mathematically convert a weight into many different types of units and instantly display those results with a press of the UNITS key. Secondary units can be specified on the FORMAT menu using the SECNDR parameter, or by using EDP commands.

- To configure secondary units using the front panel menus, use Table 8-4 to find the conversion multiplier for the MULT parameter. For example, if the primary unit is pounds and the secondary unit is short tons, set the MULT parameter to 0.00050, then press **⬅** to save the value.
- To configure secondary units using EDP commands, use the Table 8-4 to find the conversion multiplier for the SEC.MULT command. For example, if the primary unit is pounds and the secondary unit is short tons, send the EDP command SEC.MULT= 0.0005<CR> to set the multiplier for the secondary units.
- Long tons and grains units listed in Table 8-4 cannot be directly specified as primary or secondary units on the 590 AG Indicator indicator. For these or other unlisted units of weight, specify NONE on the UNITS parameter.



**Note** Ensure that the secondary decimal point position is set appropriately for the scale capacity in the secondary units. If the converted value requires more digits than are available, the indicator will display an overflow message (OVERFL).

For example, if the primary units are short tons, secondary units are pounds, and the secondary decimal point is set to 8888.88, the indicator will overflow if 5 tons or more are applied to the scale. With 5 tons applied, and a conversion factor of 2000, the secondary units display needs five digits to the left of the decimal point to display the 10000 lb secondary units value.

Primary Unit	x Multiplier	Secondary Unit
grains	0.06480	grams
	0.00229	ounces
	0.00014	pounds
	0.00006	kilograms
ounces	437.500	grains
	28.3495	grams
	0.06250	pounds
	0.02835	kilograms
pounds	7000.00	grains
	453.592	grams
	16.0000	ounces
	0.45359	kilograms
	0.00050	short tons
	0.00045	long tons
	0.00045	metric tons
short tons	2000.00	pounds
	907.185	kilograms
	0.89286	long tons
	0.90718	metric tons
grams	15.4324	grains
	0.03527	ounces
	0.00220	pounds
	0.00100	kilograms

Table 8-4. Conversion Factors

Primary Unit	x Multiplier	Secondary Unit
kilograms	15432.4	grains
	35.2740	ounces
	1000.00	grams
	2.20462	pounds
	0.00110	short tons
	0.00098	long tons
	0.00100	metric tons
metric tons	2204.62	pounds
	1000.00	kilograms
	1.10231	short tons
	0.98421	long tons
long tons	2240.00	pounds
	1016.05	kilograms
	1.12000	short tons
	1.01605	metric tons

Table 8-4. Conversion Factors

## 8.6 Digital Filtering

The 590 AG Indicator uses averaged digital filtering to reduce the effect of vibration on weight readings. Adjustable threshold and sensitivity functions allow quick settling by suspending filter averaging, allowing the weight reading to jump to the new value. Figure 8-3 shows the digital filter parameters on the CONFIG menu.

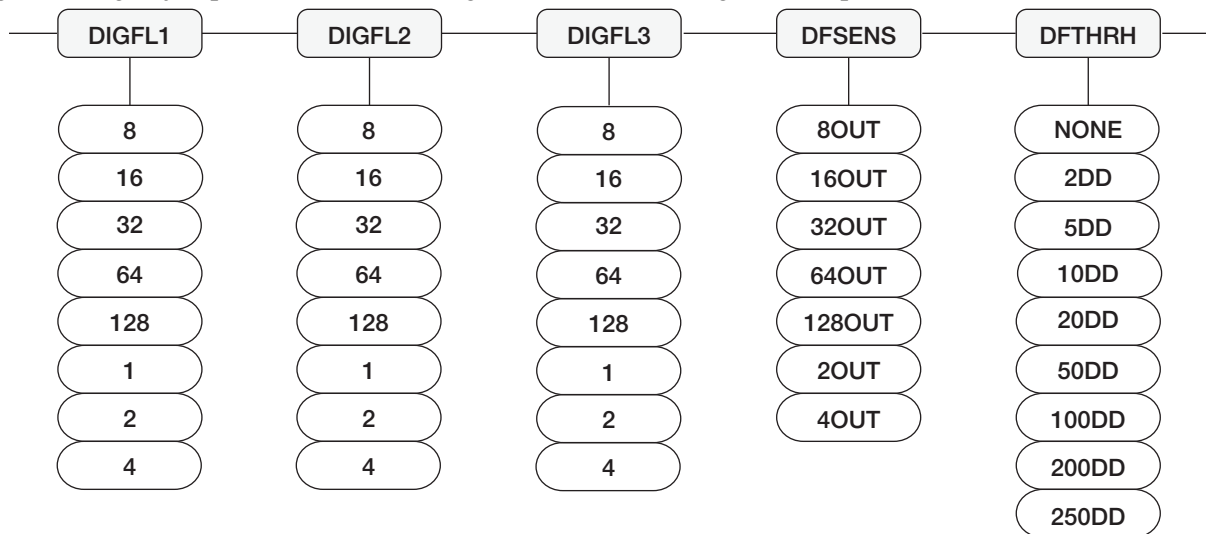


Figure 8-3. Digital Filtering Parameters on the Configuration (CONFIG) Menu



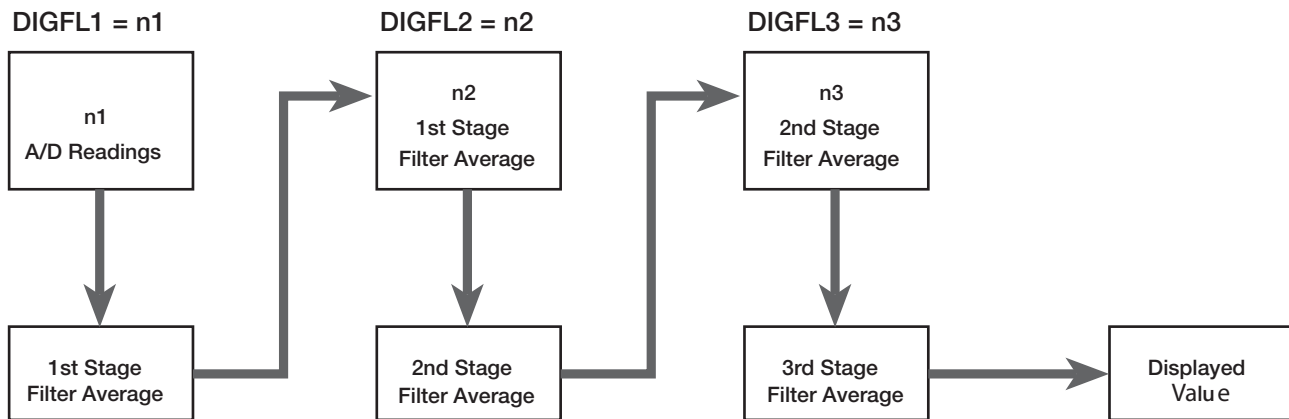


Figure 8-4. Flow Diagram for 590 AG Indicator Digital Filters

### 8.6.1 DIGFLx Parameters

The first three digital filtering parameters, DIGFL1, DIGFL2, and DIGFL3, are configurable filter stages that control the effect of a single A/D reading on the displayed weight. The value assigned to each parameter sets the number of readings received from the preceding filter stage before averaging (see Figure 8-4).

The overall filtering effect can be expressed by multiplying the values assigned to the three filter stages:

$$DIGFL1 \times DIGFL2 \times DIGFL3$$

For example, if the filters are configured as DIGFL1=4, DIGFL2=8, DIGFL3=8, the overall filtering effect is 256 (4 x 8 x 8). With this configuration, each A/D reading has a 1-in-256 effect on the displayed weight value. Setting the filters to 1 effectively disables digital filtering (1 x 1 x 1 = 1).

### 8.6.2 DFSENS and DFTHR Parameters

The three digital filters can be used by themselves to eliminate vibration effects, but heavy filtering also increases settling time. The DFSENS (digital filter sensitivity) and DFTHR (digital filter threshold) parameters can be used to temporarily override filter averaging and improve settling time:

- DFSENS specifies the number of consecutive scale readings that must fall outside the filter threshold (DFTHR) before digital filtering is suspended.
- DFTHR sets a threshold value, in display divisions. When a specified number of consecutive scale readings (DFSENS) fall outside of this threshold, digital filtering is suspended. Set DFTHR to NONE to turn off the filter override.

### 8.6.3 Setting the Digital Filter Parameters

Fine-tuning the digital filter parameters greatly improves indicator performance in heavy-vibration environments. Use the following procedure to determine vibration effects on the scale and optimize the digital filtering configuration.

1. In setup mode, set all three digital filters (DIGFL1, DIGFL2, DIGFL3) to 1. Set DFTHR to NONE. Return indicator to normal mode.
2. Remove all weight from the scale, then watch the indicator display to determine the magnitude of vibration effects on the scale. Record the weight below which all but a few readings fall. This value is used to calculate the DFTHR parameter value in Step 4.

For example, if a heavy-capacity scale produces vibration-related readings of up to 50 lb, with occasional spikes to 75 lb, record 50 lb as the threshold weight value.

3. Place the indicator in setup mode and set the digital filters (DIGFLx) to eliminate the vibration effects on the scale. (Leave DFTHR set to NONE.) Reconfigure as necessary to find the lowest effective values for the DIGFLx parameters.
4. With optimum values assigned to the DIGFLx parameters, calculate the DFTHR parameter value by converting the weight value recorded in Step 2 to display divisions:

$$\text{threshold\_weight\_value} / \text{DSPDIV}$$

In the example in Step 2, with a threshold weight value of 50 lb and a display division value of 5D:  $50 / 5D = 10$ . DFTHR should be set to 10DD for this example.

- Finally, set the DFSENS parameter high enough to ignore transient peaks. Longer transients (typically caused by lower vibration frequencies) will cause more consecutive out-of-band readings, so DFSENS should be set higher to counter low frequency transients.

Reconfigure as necessary to find the lowest effective value for the DFSENS parameter.

## 8.7 Test Mode

In addition to normal and setup modes, test mode provides a number of diagnostic functions for the 590 AG Indicator, including:

- Display raw A/D count
- Set A/D offset and gain calibration
- Reset configuration parameters to default values
- Print indicator configuration

To enter test mode, press and hold the setup switch until the front panel display shows the word *TEST*. After about three seconds, the test mode display automatically shifts to the first test menu function, A/DTST.

**! Important** *A/D calibration functions, ADOFFS and ADGAIN, must be used only by qualified service personnel, and only after replacing A/D converter components. Improper A/D calibration may render the indicator unusable.*

Figure 8-5 shows the Test Menu structure; Figure 8-6 shows the front panel key functions in test mode. Note that, because the Test Menu functions are all on a single menu level, the GROSS/NET ( $\nabla$ ) key has no function. Press the ZERO ( $\Delta$ ) key to exit test mode.

Table 8-5 on page 47 summarizes the test menu functions.



Figure 8-5. Test Menu

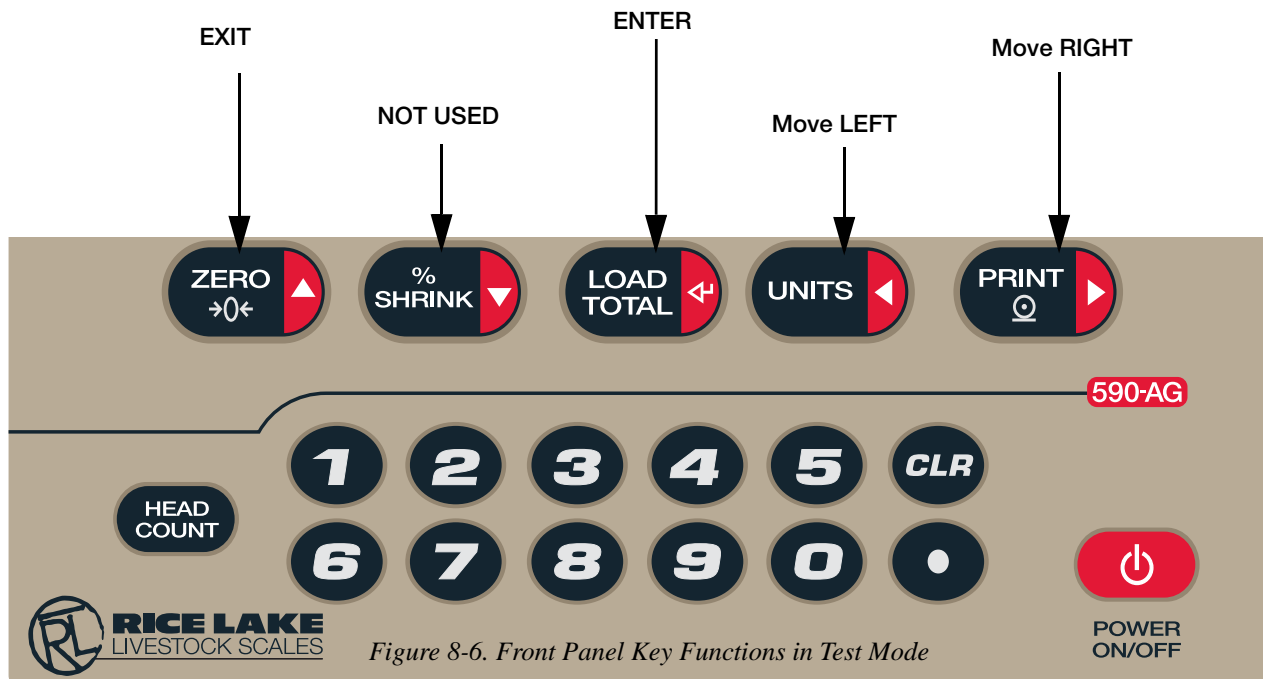


Figure 8-6. Front Panel Key Functions in Test Mode

TEST Menu	
Function	Description
<b>A/DTST</b>	Display A/D test Press and hold Enter key to display raw count from A/D converter.
<b>ADOFFS</b>	A/D offset calibration (-0.5 mv/V) <i>Read Important! statement below before using this function.</i> Press and hold the setup switch, then press the Enter key to perform offset calibration.
<b>ADGAIN</b>	A/D gain calibration (+4.5 mv/V) <i>Read Important! statement below before using this function.</i> Press and hold the setup switch, then press the Enter key to perform gain calibration.
<b>DEFLT</b>	Default parameters Press and hold the setup switch, then press the Enter key to reset configuration and calibration parameters to factory default values. This function is equivalent to using the RESETCONFIGURATION EDP command followed by the RS (reset) EDP command.
<b>PRTCFG</b>	Print configuration Press the Enter key to print the indicator configuration to the serial port. This function is equivalent to using the DUMPALL EDP command.

*Table 8-5. Test Menu Functions*



**Important**

*A/D calibration functions, ADOFFS and ADGAIN, must be used only by qualified service personnel, and only after replacing A/D converter components. Improper A/D calibration may render the indicator unusable.*

## 8.8 Specifications

### Power

Power	9 VDC, provided by 6 x "C" cell alkaline batteries or AC adapter (9VDC, 300 mA, center-positive output connector)
Power	<100 mA (using 4 x 350Ω load cells)
Consumption	
Fusing	200 mA, self-resetting thermal fuse

### Analog Specifications

Full Scale Input Signal	Up to 17 mV
Excitation Voltage	5 ± 0.25 VDC, 4 x 350Ω or 8 x 700Ω load cells
Sense Amplifier	Differential amplifier with 4- and 6-wire sensing
Analog Signal	
Input Range	-2.5 mV/V – 22.5 mV/V
Analog Signal	
Sensitivity	0.3 μV/graduation minimum, 1.5 μV/grad recommended
Input Impedance	200 MΩ, typical
Noise (ref to input)	0.3 μV p-p with digital filters at 4-4-4
Internal Resolution	2 <sup>20</sup> (approx. 1 000 000) counts
Display Resolution	100 000 dd
Measurement Rate	Up to 30 measurements/sec
Input Sensitivity	155 nV per internal count
System Linearity	Within 0.01% of full scale
Zero Stability	155 nV/°C, maximum
Span Stability	4.0 ppm/°C, maximum
Calibration Method	Software, constants stored in EEPROM
Common Mode	
Voltage	2.5 ± 0.25 VDC
Common Mode	
Rejection	140 dB minimum @ 50 or 60 Hz
Normal Mode	
Rejection	90 dB minimum @ 50 or 60 Hz
Input Overload	± 12 V continuous, static discharge protected
RFI Protection	Signal, excitation, and sense lines protected by capacitor bypass

### Digital Specifications


Microcomputer	Phillips P51XAG30 microcontroller @ 12.288 MHz
Digital Filters	3 filters, software selectable
Serial Communications	
EDP/Printer Port	Full duplex RS-232 19200, 9600, 4800, 2400, 1200, 600, 300 bps; 8 data bits, no parity, or 7 data bits, even or odd parity

### Operator Interface

Display	6-digit LCD display: 7-segment, 1.0 in (25 mm) digits
Additional Symbols	Annunciators for gross, net, standstill, center of zero, tare, low battery. ▷ annunciators for units (lb/kg), group mode (group). Adhesive labels provided for units other than lb and kg.
Keyboard	19-key flat membrane panel
Environmental	
Operating Temperature	-10 to +40°C (legal); -10 to +50°C (industrial)
Storage Temperature	-25 to +70°C
Humidity	0–95% relative humidity
Altitude	2000 m (6500 ft) maximum

### Enclosure

Enclosure Dimensions (including battery compartment cover)	9.0 in x 6.5 in x 3.0 in 23 cm x 16.5 cm x 7.6 cm
--	--

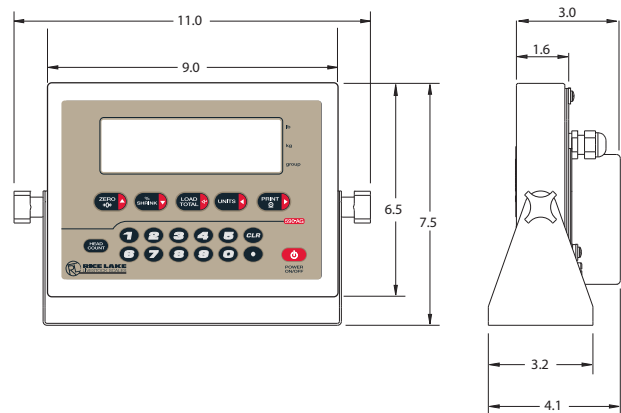

Shipping Weight	6.5 lb (2.95 Kg)
Rating/Material	NEMA 4X/IP66, stainless steel

### Certifications and Approvals



NTEP	
CoC Number	98-203A2
Accuracy Class	III/IIIL $n_{max}$ : 10 000

Measurement Canada	
Approval	AM-5300
Accuracy Class	III $n_{max}$ : 10 000 III HD $n_{max}$ : 20 000



# 590 AG Indicator Limited Warranty

---

Rice Lake Weighing Systems (RLWS) warrants that all RLWS equipment and systems properly installed by a Distributor or Original Equipment Manufacturer (OEM) will operate per written specifications as confirmed by the Distributor/OEM and accepted by RLWS. All systems and components are warranted against defects in materials and workmanship for two years.

RLWS warrants that the equipment sold hereunder will conform to the current written specifications authorized by RLWS. RLWS warrants the equipment against faulty workmanship and defective materials. If any equipment fails to conform to these warranties, RLWS will, at its option, repair or replace such goods returned within the warranty period subject to the following conditions:

- Upon discovery by Buyer of such nonconformity, RLWS will be given prompt written notice with a detailed explanation of the alleged deficiencies.
- Individual electronic components returned to RLWS for warranty purposes must be packaged to prevent electrostatic discharge (ESD) damage in shipment. Packaging requirements are listed in a publication, *Protecting Your Components From Static Damage in Shipment*, available from RLWS Equipment Return Department.
- Examination of such equipment by RLWS confirms that the nonconformity actually exists, and was not caused by accident, misuse, neglect, alteration, improper installation, improper repair or improper testing; RLWS shall be the sole judge of all alleged non-conformities.
- Such equipment has not been modified, altered, or changed by any person other than RLWS or its duly authorized repair agents.
- RLWS will have a reasonable time to repair or replace the defective equipment. Buyer is responsible for shipping charges both ways.
- In no event will RLWS be responsible for travel time or on-location repairs, including assembly or disassembly of equipment, nor will RLWS be liable for the cost of any repairs made by others.

**THESE WARRANTIES EXCLUDE ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. NEITHER RLWS NOR DISTRIBUTOR WILL, IN ANY EVENT, BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

**RLWS AND BUYER AGREE THAT RLWS'S SOLE AND EXCLUSIVE LIABILITY HEREUNDER IS LIMITED TO REPAIR OR REPLACEMENT OF SUCH GOODS. IN ACCEPTING THIS WARRANTY, THE BUYER WAIVES ANY AND ALL OTHER CLAIMS TO WARRANTY.**

**SHOULD THE SELLER BE OTHER THAN RLWS, THE BUYER AGREES TO LOOK ONLY TO THE SELLER FOR WARRANTY CLAIMS.**

**NO TERMS, CONDITIONS, UNDERSTANDING, OR AGREEMENTS PURPORTING TO MODIFY THE TERMS OF THIS WARRANTY SHALL HAVE ANY LEGAL EFFECT UNLESS MADE IN WRITING AND SIGNED BY A CORPORATE OFFICER OF RLWS AND THE BUYER.**

© 2012 Rice Lake Weighing Systems, Inc. Rice Lake, WI USA. All Rights Reserved.

RICE LAKE WEIGHING SYSTEMS • 230 WEST COLEMAN STREET • RICE LAKE, WISCONSIN 54868 • USA

